

ENZV STAR RWY 18 (RNAV) - ROUTES

GENERAL:

Surveillance service shall be available

LOSS OF RNAV CAPABILITY:

State “UNABLE RNAV 1 DUE (reason)”. Request vectoring.

VECTORING:

When appropriate, vectors will be used for sequencing to final.

DESIGNATOR	ROUTE	RESTRICTIONS	DESCEND	CLEARANCE LIMIT
BEGOD 2S  (BEGOD TWO SIERRA ARRIVAL)	From BEGOD, to ZV500, to ZV635, to DIMAV, to ZV632, to ZV631, to ZV630, turn right to GOGUT.	Cross ZV500 between 7000 FT and FL110. MAX 240 KT IAS at ZV635. Cross DIMAV at or above 7000 FT. MAX 220 KT IAS at DIMAV. Cross GOGUT at or above 2500 FT.	As cleared by ATC.	GOGUT
IDIPI 3S  (IDIPI THREE SIERRA ARRIVAL)	From IDIPI to ZV625, to ZV623, to NULVU, to ZV622, to ZV621, to ZV620, turn left to ROXON.	Cross IDIPI at or above FL 100. Cross ZV625 between FL 80 and FL 110. MAX 220 KT IAS at ZV623. Cross NULVU at or above 7000 FT. Cross ZV620 at or above 4000 FT. Cross ROXON at or above 3000 FT.	As cleared by ATC.	ROXON
KUNEM 2S  (KUNEM TWO SIERRA ARRIVAL)	From KUNEM to ZV636, to ZV634, to ZV633, to DIMAV, to ZV632, to ZV631, to ZV630, turn right to GOGUT.	Cross KUNEM at or above FL 100. Cross ZV636 between FL 90 and FL 110. MAX 220 KT IAS at ZV634. Cross DIMAV at or above 7000 FT. Cross GOGUT at or above 2500 FT.	As cleared by ATC.	GOGUT
RIVEX 2S  (RIVEX TWO SIERRA ARRIVAL)	From RIVEX to ZV626, to ZV623, to NULVU, to ZV622, to ZV621, to ZV620, turn left to ROXON.	Cross RIVEX at or above FL 100. Cross ZV626 between FL 80 and FL 110. MAX 220 KT IAS at ZV623. Cross NULVU at or above 7000 FT. Cross ZV620 at or above 4000 FT. Cross ROXON at or above 3000 FT.	As cleared by ATC.	ROXON
ROPNO 2S  (ROPNO TWO SIERRA ARRIVAL)	From ROPNO to ZV627, to ZV624, to NULVU, to ZV622, to ZV621, to ZV620, turn left to ROXON.	Cross ROPNO at or above FL 100. Cross ZV627 between FL 80 and FL 110. Cross ZV624 at or above FL 80. Cross NULVU at or above 7000 FT. MAX 220 KT IAS at NULVU. Cross ZV620 at or above 4000 FT. Cross ROXON at or above 3000 FT.	As cleared by ATC.	ROXON
UNBUD 2S  (UNBUD TWO SIERRA ARRIVAL)	From UNBUD to ZV637, to ZV634, to ZV633, to DIMAV, to ZV632, to ZV631, to ZV630, turn right to GOGUT.	Cross UNBUD at or above FL 100. Cross ZV637 between FL 80 and FL 150. MAX 220 KT IAS at ZV634. Cross DIMAV at or above 7000 FT. Cross GOGUT at or above 2500 FT.	As cleared by ATC.	GOGUT
UPDER 3S  (UPDER THREE SIERRA ARRIVAL)	From UPDER to SOGTI, to BEGOD, to ZV500, to ZV635, to DIMAV, to ZV632, to ZV631, to ZV630, turn right to GOGUT.	Cross ZV500 between 7000 FT and FL 110. MAX 240 KT IAS at ZV635. Cross DIMAV at or above 7000 FT. MAX 220 KT IAS at DIMAV. Cross GOGUT at or above 2500 FT.	As cleared by ATC.	GOGUT