

ENZV STAR RWY 36 (RNAV) - ROUTES

GENERAL:

Surveillance service shall be available

LOSS OF RNAV CAPABILITY:

State “UNABLE RNAV 1 DUE (reason)”. Request vectoring.

VECTORIZING:

When appropriate, vectors will be used for sequencing to final.

DESIGNATOR	ROUTE	RESTRICTIONS	DESCEND	CLEARANCE LIMIT
BEGOD 2T  (BEGOD TWO TANGO ARRIVAL)	From BEGOD, to ZV500, to ZV724, to ZV723, to REGVO, to ZV722, to ZV721, to ZV720, turn left to ELBUV.	Cross ZV724 between 7000 FT and FL 80. MAX 220 KT IAS at ZV724. Cross REGVO at or above 7000 FT. Cross ELBUV at or above 2700 FT.	As cleared by ATC.	ELBUV
IDIPI 2T  (IDIPI TWO TANGO ARRIVAL)	From IDIPI to ZV737, to ZV734, to LURUP, to ZV733, to ZV732, to ZV731, to ZV730, turn right to TUXAS.	Cross IDIPI at or above FL 100. Cross ZV737 between FL 80 and FL 120. MAX 220 KT IAS at ZV734. Cross LURUP at or above 7000 FT. Cross ZV731 at or above 4000 FT. Cross TUXAS at or above 3000 FT.	As cleared by ATC.	TUXAS
KUNEM 3T  (KUNEM THREE TANGO ARRIVAL)	From KUNEM to ZV727, to ZV726, to ZV724, to ZV723, to REGVO, to ZV722, to ZV721, to ZV720, turn left to ELBUV.	Cross KUNEM at or above FL 100. Cross ZV727 at or above FL 90. Cross ZV726 at FL 80. MAX 220 KT IAS at ZV724. Cross REGVO at or above 7000 FT. Cross ELBUV at or above 2700 FT.	As cleared by ATC.	ELBUV
RIVEX 2T  (RIVEX TWO TANGO ARRIVAL)	From RIVEX to ZV735, to LURUP, to ZV733, to ZV732, to ZV731, to ZV730, turn right to TUXAS.	Cross RIVEX at or above FL 100. Cross ZV735 at FL 80. Cross LURUP at or above 7000 FT. MAX 220 KT IAS at LURUP. Cross ZV731 at or above 4000 FT. Cross TUXAS at or above 3000 FT.	As cleared by ATC.	TUXAS
ROPNO 2T  (ROPNO TWO TANGO ARRIVAL)	From ROPNO to ZV736, to ZV734, to LURUP, to ZV733, to ZV732, to ZV731, to ZV730, turn right to TUXAS.	Cross ROPNO at or above FL 100. Cross ZV736 between FL 80 and FL 140. MAX 220 KT IAS at ZV734. Cross LURUP at or above 7000 FT. Cross ZV731 at or above 4000 FT. Cross TUXAS at or above 3000 FT.	As cleared by ATC.	TUXAS
UNBUD 2T  (UNBUD TWO TANGO ARRIVAL)	From UNBUD to ZV725, to REGVO, to ZV722, to ZV721, to ZV720, turn left to ELBUV.	Cross UNBUD at or above FL 100. Cross ZV725 at FL 80. Cross REGVO at or above 7000 FT. MAX 220 KT IAS at REGVO. Cross ELBUV at or above 2700 FT.	As cleared by ATC.	ELBUV
UPDER 3T  (UPDER THREE TANGO ARRIVAL)	From UPDER to SOGTI, to BEGOD, to ZV500, to ZV724, to ZV723, to REGVO, to ZV722, to ZV721, to ZV720, turn left to ELBUV.	Cross ZV724 between 7000 FT and FL 80. MAX 220 KT IAS at ZV724. Cross REGVO at or above 7000 FT. Cross ELBUV at or above 2700 FT.	As cleared by ATC.	ELBUV