

OPERATIONAL HOURS

In order to ensure clarity and avoid misunderstandings caused by the application of daylight saving time in Norway, which causes a difference in relation between UTC and local time during summer and winter periods, starting with 23 JAN 2025 Avinor will publish all times as winter time, with summer time in brackets, in AIP Norway, associated publications and AIS Portal.

- Co-ordinated Universal Time (UTC) and the Gregorian calendar are used by air navigation services and in publications issued by the Norwegian Aeronautical Information Service. Reporting of time is expressed to the nearest minute, e.g. 12:40:35 is reported as 12:41.

Due to the application of daylight saving time in Norway, the relation between UTC and local time is different during summer and winter period. The summer period starts every year on the last SUN of MAR at 0100 UTC and ends on the last SUN of OCT at 0100 UTC. During the winter period, local time is UTC + 1 HR. During the summer period, local time is UTC + 2 HR.

In the AIP Norway, associated publications and AIS Portal, UTC times applicable during the summer period will be added between brackets.

- Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.
- Changes since last revision are highlighted in yellow

Revised per AIRAC 16 APR 2026

[Download PDF](#)

Filter AD

AD 2.3 Operational hours: Admin

| AIRPORT | ICAO | HR |
|-------------------|------|--|
| Alta | ENAT | MON - FRI: 0700 - 1430 (0600 - 1330), SAT - SUN: NIL |
| Andøya/Andenes | ENAN | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Arendal/Gullknapp | ENGK | NIL |
| Bardufoss | ENDU | CIV: MON - FRI: 0700 - 1500 (0600 - 1400) EXC holidays, SAT - SUN: NIL, MIL: H24 via Base/Wing Ops |
| Bergen/Flesland | ENBR | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |

[Back to top](#)

| | | |
|--------------------------|------|--|
| Berlevåg | ENBV | MON - FRI: 15 MAY - 15 SEP: 0700 - 1400 (0600 - 1300) EXC holidays / 16 SEP - 14 MAY: 0700 - 1445 (0600 - 1345) EXC holidays, SAT - SUN: NIL |
| Bodø | ENBO | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Brønnøysund/Brønnøy | ENBN | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Båtsfjord | ENBS | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Florø | ENFL | MON - FRI: 0510 - 2030 (0410 - 1930), SAT: 0805 - 1730 (0705 - 1630), SUN: 0820 - 0850 (0720 - 0750) |
| Førde/Bringeland | ENBL | MON - FRI: 0800 - 1500 (0700 - 1400) EXC holidays, SAT - SUN: NIL |
| Hammerfest | ENHF | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Harstad/Narvik/Evenes | ENEV | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Hasvik | ENHK | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Haugesund/Karmøy | ENHD | MON - FRI: 0900 - 1200 (0800 - 1100) EXC holidays, SAT - SUN: NIL |
| Honningsvåg/Valan | ENHV | MON - FRI: 0700 - 1500 (0600 - 1400) EXC holidays, SAT - SUN: NIL |
| Hønefoss/Eggemoen | ENEG | MON - FRI: 0600 - 1500 (0500 - 1400) EXC holidays, SAT - SUN: NIL |
| Kirkenes/Høybukthoen | ENKR | MON - FRI: 0600 - 1500 (0500 - 1400) EXC holidays, SAT - SUN: NIL |
| Kjeller | ENKJ | NIL |
| Kristiansand/Kjevik | ENCN | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Kristiansund/Kvernberget | ENKB | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Lakselv/Banak | ENNA | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Leknes | ENLK | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Mehamn | ENMH | MON - FRI: 0350 - 1410 (0250 - 1310) / 1530 - 2230 (1430 - 2130), SAT: 0450 - 0700 (0350 - 0600) / 1120 - 1400 (1020 - 1300), SUN: 1520 - 2230 (1420 - 2130) |
| Mo I Rana/Røssvoll | ENRA | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |

| | | |
|---------------------|------|---|
| Molde/Årø | ENML | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| | | RMK: post@avinor.no |
| Mosjøen/Kjærstad | ENMS | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Namsos | ENNM | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Notodden | ENNO | MON - FRI: 0800 - 1500 (0700 - 1400) EXC holidays, SAT - SUN: NIL |
| Ny Ålesund | ENAS | MON - FRI: 0700 - 1100 (0600 - 1000) / 1200 - 1530 (1100 - 1430) EXC holidays, SAT - SUN: NIL |
| Oslo/Gardermoen | ENGM | MON - FRI: 0700 - 1500 (0600 - 1400), SAT - SUN: NIL |
| Rena | ENRE | MON - FRI: 0800 - 1500 (0700 - 1400), SAT - SUN: NIL. EXC holidays. |
| Rygge | ENRY | H24 |
| Røros | ENRO | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Rørvik/Ryum | ENRM | NIL |
| Røst | ENRS | MON - FRI: 0700 - 1500 (0600 - 1400) EXC holidays, SAT - SUN: NIL |
| Sandane/Anda | ENSD | MON - FRI: 0730 - 1500 (0630 - 1400) EXC holidays, SAT - SUN: NIL |
| Sandefjord/Torp | ENTO | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Sandnessjøen/Stokka | ENST | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Sogndal/Haukåsen | ENSG | MON - FRI: 0800 - 1500 (0700 - 1400) EXC holidays, SAT - SUN: NIL |
| Stavanger/Sola | ENZV | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Stokmarknes/Skagen | ENSK | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Stord/Sørstokken | ENSO | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Svalbard/Longyear | ENSB | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Svolvær/Helle | ENSH | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |

| | | |
|--------------------|------|---|
| Sørkjosen | ENSR | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Tromsø/Langnes | ENTC | MON - FRI: 0800 - 1430 (0700 - 1530) EXC holidays, SAT - SUN: NIL |
| Trondheim/Værnes | ENVA | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Vadsø | ENVD | MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL |
| Vardø/Svartnes | ENSS | MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL |
| Ørland | ENOL | MON - FRI: CIV: 0700 - 1400 (0600 - 1300), SAT - SUN: NIL |
| Ørsta-Volda/Hovden | ENOV | MON - FRI: 0730 - 1430 (0630 - 1330) EXC holidays, SAT - SUN: NIL |
| Ålesund/Vigra | ENAL | MON - FRI: 0700 - 1530 (0600 - 1430) EXC holidays, SAT - SUN: NIL |

AD 2.3 Operational hours: Customs and immigration

| AIRPORT | ICAO | HR |
|---------------------|------|---|
| Alta | ENAT | NIL |
| Andøya/Andenes | ENAN | NIL |
| Arendal/Gullknapp | ENGK | NIL |
| Bardufoss | ENDU | NIL |
| Bergen/Flesland | ENBR | Customs: 0700 - 2300 (0600 - 2200). Border control: all international scheduled flights H24. Non-scheduled international flights 0600 - 2300 (0500 - 2200), otherwise call 02800. |
| Berlevåg | ENBV | NIL |
| Bodø | ENBO | AVBL O/R to ATS 90 MIN prior to ETA |
| Brønnøysund/Brønnøy | ENBN | NIL |
| Båtsfjord | ENBS | NIL |
| Florø | ENFL | NIL |
| Førde/Bringeland | ENBL | NIL |

| | | |
|--------------------------|------|--|
| Hammerfest | ENHF | NIL |
| Harstad/Narvik/Evenes | ENEV | AVBL O/R to operator/handling agent 4 HR prior to ETA |
| Hasvik | ENHK | NIL |
| Haugesund/Karmøy | ENHD | AVBL through mandatory handling, REF https://flyhau.no/en/tariff-regulations |
| Honningsvåg/Valan | ENHV | NIL |
| Hønefoss/Eggemoen | ENEG | AVBL O/R AD ADMIN |
| Kirkenes/Høybuktnoen | ENKR | AVBL O/R to ATS 1 HR prior to ETA |
| Kjeller | ENKJ | NIL |
| Kristiansand/Kjevik | ENCN | AVBL O/R to ATS 1 HR prior to ETA |
| Kristiansund/Kvernberget | ENKB | AVBL O/R to ATS 4 HR prior to ETA |
| Lakselv/Banak | ENNA | O/R AD ADMIN or Customs HQ (+47) 22 86 03 12. ATS shall be notified of INTL ARR not later than 48 HR prior to ETA. |
| Leknes | ENLK | NIL |
| Mehamn | ENMH | NIL |
| Mo I Rana/Røssvoll | ENRA | NIL |
| Molde/Årø | ENML | AVBL O/R to ATS 3 HR prior to ETA |
| Mosjøen/Kjærstad | ENMS | NIL |
| Namsos | ENNM | NIL |
| Notodden | ENNO | O/R to ATS 24 HR prior to ETA for INTL flights approved by Norwegian CAA. |
| Ny Ålesund/ Hamnerabben | ENAS | Not required |
| Oslo/Gardermoen | ENGM | H24 |
| Rena | ENRE | NIL |

| | | |
|---------------------|------|---|
| Rygge | ENRY | REF AD 2.20 |
| Røros | ENRO | MON - FRI: AVBL 0700 - 1430 (0600 - 1330) O/R to ATS 3 HR prior to ETA, SAT - SUN: NIL |
| Rørvik/Ryum | ENRM | NIL |
| Røst | ENRS | NIL |
| Sandane/Anda | ENSD | NIL |
| Sandefjord/Torp | ENTO | AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice via operator/handling agent, or to customs (+47) 458 71 040 for flights not subject to mandatory handling. |
| Sandnessjøen/Stokka | ENST | NIL |
| Sogndal/Haukåsen | ENSG | NIL |
| Stavanger/Sola | ENZV | H24 |
| Stokmarknes/Skagen | ENSK | NIL |
| Stord/Sørstokken | ENSO | NIL |
| Svalbard/Longyear | ENSB | All TFC to, from and within Svalbard are subject to PPR, REF ENSB AD 2.20 |
| Svolvær/Helle | ENSH | NIL |
| Sørkjosen | ENSR | NIL |
| Tromsø/Langnes | ENTC | O/R 90 MIN prior notice via operator / handling agent |
| Trondheim/Værnes | ENVA | AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice (+47) 67 03 28 00 |
| Vadsø | ENVD | NIL |
| Vardø/Svartnes | ENSS | NIL |
| Ørland | ENOL | NIL |
| Ørsta-Volda/Hovden | ENOV | NIL |
| Ålesund/Vigra | ENAL | AVBL O/R to ATS 2 HR prior to ETA |

AD 2.3 Operational hours: MET Office

| AIRPORT | ICAO | HR |
|-----------------------|------|--------------------------------------|
| Alta | ENAT | NIL |
| Andøya/Andenes | ENAN | NIL |
| Arendal/Gullknapp | ENGK | NIL |
| Bardufoss | ENDU | H24 |
| | | RMK: Bardufoss MET (+47) 67 03 44 85 |
| Bergen/Flesland | ENBR | NIL |
| Berlevåg | ENBV | NIL |
| Bodø | ENBO | NIL |
| Brønnøysund/Brønnøy | ENBN | NIL |
| Båtsfjord | ENBS | NIL |
| Florø | ENFL | NIL |
| Førde/Bringeland | ENBL | NIL |
| Hammerfest | ENHF | NIL |
| Harstad/Narvik/Evenes | ENEV | H24 |
| Hasvik | ENHK | NIL |
| Haugesund/Karmøy | ENHD | NIL |
| Honningsvåg/Valan | ENHV | NIL |
| Hønefoss/Eggemoen | ENEG | NIL |
| Kirkenes/Høybuktnoen | ENKR | NIL |

| | | |
|--------------------------|------|-----|
| Kjeller | ENKJ | NIL |
| Kristiansand/Kjevik | ENCN | NIL |
| Kristiansund/Kvernberget | ENKB | NIL |
| Lakselv/Banak | ENNA | NIL |
| Leknes | ENLK | NIL |
| Mehamn | ENMH | NIL |
| Mo I Rana/Røssvoll | ENRA | NIL |
| Molde/Årø | ENML | NIL |
| Mosjøen/Kjærstad | ENMS | NIL |
| Namsos | ENNM | NIL |
| Notodden | ENNO | NIL |
| Ny Ålesund/ Hamnerabben | ENAS | NIL |
| Oslo/Gardermoen | ENGM | NIL |
| Rena | ENRE | NIL |
| Rygge | ENRY | NIL |
| Røros | ENRO | NIL |
| Rørvik/Ryum | ENRM | NIL |
| Røst | ENRS | NIL |
| Sandane/Anda | ENSD | NIL |
| Sandefjord/Torp | ENTO | NIL |
| Sandnessjøen/Stokka | ENST | NIL |

| | | |
|--------------------|------|--|
| Sogndal/Haukåsen | ENSG | NIL |
| Stavanger/Sola | ENZV | NIL |
| Stokmarknes/Skagen | ENSK | NIL |
| Stord/Sørstokken | ENSO | NIL |
| Svalbard/Longyear | ENSB | MON - FRI: 0730 - 1400 (0630 - 1300) EXC holiday, SAT - SUN: N/A |
| Svolvær/Helle | ENSH | NIL |
| Sørkjosen | ENSR | NIL |
| Tromsø/Langnes | ENTC | NIL |
| Trondheim/Værnes | ENVA | NIL |
| Vadsø | ENVD | NIL |
| Vardø/Svartnes | ENSS | NIL |
| Ørland | ENOL | H24 |
| Ørsta-Volda/Hovden | ENOV | NIL |
| Ålesund/Vigra | ENAL | NIL |

AD 2.3 Operational hours: ATS

| AIRPORT | ICAO | HR |
|-------------------|------|--|
| Alta | ENAT | MON - FRI: 0415 - 2305 (0315 - 2205), SAT: 0900 - 1900 (0800 - 1800), SUN: 0600 - 0700 (0500 - 0600) / 0900 - 2305 (0800 - 2205) |
| | | RMK: NIL |
| Andøya/Andenes | ENAN | MON - FRI: 0420 - 2100 (0320 - 2000), SAT: 0750 - 0830 (0650 - 0730), SUN: 1015 - 2100 (0915 - 2000) |
| | | RMK: Public HOL excluded |
| Arendal/Gullknapp | ENGK | No ATS provided |
| | | |

| | | |
|-----------------------|------|--|
| | | RMK: NIL |
| Bardufoss | ENDU | MON - FRI: 0520 - 2200 (0420 - 2100), SAT: 0800 - 1710 (0700 - 1610), SUN: 0850 - 2230 (0750 - 2130) |
| | | RMK: NIL |
| Bergen/Flesland | ENBR | H24 |
| | | RMK: NIL |
| Berlevåg | ENBV | MON - FRI: 0600 - 2030 (0500 - 1930), SAT: NIL, SUN: 1200 - 2030 (1100 - 1930) |
| | | RMK: HOSP/SAR outside HR OF OPS AVBL O/R 40 MIN prior notice via Polaris ACC Bodø |
| Bodø | ENBO | H24 |
| | | RMK: NIL |
| Brønnøysund/Brønnøy | ENBN | MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0915 - 1515 (0815 - 1415), SUN: 1200 - 2200 (1100 - 2100) |
| | | RMK: NIL |
| Båtsfjord | ENBS | MON - FRI: 0600 - 2015 (0500 - 1915), SAT: NIL, SUN: 1115 - 2015 (1015 - 1915) |
| | | RMK: HOSP/SAR outside HR OF OPS AVBL O/R 40 MIN prior notice via Polaris ACC Bodø |
| Florø | ENFL | MON - FRI: 0400 - 2130 (0300 - 2030), SAT: 1200 - 1215 (1100 - 1115) / 1530 - 1700 (1430 - 1600), SUN: 1200 - 1215 (1100 - 1115) / 1630 - 2130 (1530 - 2030) |
| | | RMK: NIL |
| Førde/Bringeland | ENBL | MON - FRI: 0450 - 2230 (0350 - 2130), SAT: 0730 - 0830 (0630 - 0730) / 1130 - 1530 (1030 - 1430), SUN: 0730 - 0830 (0630 - 0730) / 1130 - 2230 (1030 - 2130) |
| | | RMK: NIL |
| Hammerfest | ENHF | MON - FRI: 0505 - 2310 (0405 - 2210), SAT: 1150 - 1400 (1050 - 1300), SUN: 0935 - 2310 (0835 - 2210) |
| | | RMK: HOSP/SAR OUTSIDE HR OF OPS AVBL O/R VIA POLARIS ACC TEL (+47) 75 58 29 57 |
| Harstad/Narvik/Evenes | ENEV | H24 |
| | | RMK: NIL |

| | | | |
|--------------------------|------|--|---|
| Hasvik | ENHK | MON - FRI: 0630 - 2000 (0530 - 1900), SAT: NIL, SUN: 1330 - 1530 (1230 - 1430) / 1830 - 2000 (1730 - 1900) | |
| | | RMK: | Extended HR of OPS AVBL for HOSP/SAR O/R via Polaris ACC Bodø |
| Haugesund/Karmøy | ENHD | MON - FRI: 0520 - 2100 (0420 - 2000), SAT: 0600 - 2100 (0500 - 2000), SUN: 0700 - 2230 (0600 - 2130) | |
| | | RMK: | NIL |
| Honningsvåg/Valan | ENHV | MON - FRI: 0435 - 2205 (0335 - 2105), SAT: CLSD, SUN: 1130 - 13:30 (1030 - 1230) / 2030 - 2205 (1930 - 2105) | |
| | | RMK: | NIL |
| Hønefoss/Eggemoen | ENEG | No ATS service provided | |
| | | RMK: | NIL |
| Kirkenes/Høybuktmoen | ENKR | MON - FRI: 0330 - 2315 (0230 - 2215), SAT: 0830 - 1810 (0730 - 1710), SUN: 0900 - 2315 (0800 - 2215) | |
| | | RMK: | NIL |
| Kjeller | ENKJ | No ATS service provided | |
| | | RMK: | AD AVBL for VFR 0700 - 2100 (0600 - 2000). PPR for all TFC. |
| Kristiansand/Kjevik | ENCN | MON - FRI: 0510 - 2215 (0410 - 2115), SAT: 0510 - 2110 (0410 - 2010), SUN: 0510 - 2215 (0410 - 2115) | |
| | | RMK: | NIL |
| Kristiansund/Kvernberget | ENKB | MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0900 - 1600 (0800 - 1500), SUN: 1100 - 2200 (1000 - 2100) | |
| | | RMK: | NIL |
| Lakselv/Banak | ENNA | MON - FRI: 0520 - 2250 (0420 - 2150), SAT: 1100 - 1530 (1000 - 1430), SUN: 1040 - 2250 (0940 - 2150) | |
| | | RMK: | AVBL O/R H24 for charterflights |
| Leknes | ENLK | MON - FRI: 0535 - 2255 (0435 - 2155), SAT: 0750 - 1610 (0650 - 1510), SUN: 1000 - 1750 (0900 - 1650) / 1920 - 2255 (1820 - 2155) | |
| | | RMK: | NIL |
| Mehamn | ENMH | MON - FRI: 0405 - 1220 (0305 - 1120) / 1610 - 2320 (1510 - 2220), SAT: NIL, SUN: 1705 - 2320 (1605 - 2220) | |
| | | | |

| | | |
|-------------------------|------|--|
| | | RMK: NIL |
| Mo I Rana/Røssvoll | ENRA | MON - FRI: 0500 - 2210 (0400 - 2110), SAT: 0800 - 1500 (0700 - 1400), SUN: 1225 - 2210 (1125 - 2110) |
| | | RMK: NIL |
| Molde/Årø | ENML | MON - FRI: 0505 - 2100 (0405 - 2000), SAT: 0600 - 1500 (0500 - 1400), SUN: 0930 - 2250 (0830 - 2150) |
| | | RMK: HOSP/SAR outside HR of OPS AVBL O/R 40 MIN prior notice via Polaris ACC |
| Mosjøen/Kjærstad | ENMS | MON - FRI: 0350 - 2050 (0250 - 1950), SAT: 0820 - 1450 (0720 - 1350), SUN: 1020 - 2050 (0920 - 1950) |
| | | RMK: NIL |
| Namsos | ENNM | MON - FRI: 0520 - 2155 (0420 - 2055), SAT: CLOSED, SUN: 0930-1050 (0830 - 0950) / 1400-2155 (1300 - 2055) |
| | | RMK: NIL |
| Notodden | ENNO | MON - FRI: 0800 - 1500 (0700 - 1400), SAT: CLOSED, SUN: CLOSED |
| | | RMK: Public HOL excluded |
| Ny Ålesund/ Hamnerabben | ENAS | No detailed HR of OPS, AFIS AVBL in accordance with PPR. |
| | | RMK: Contact Kings Bay Ltd. or Longyear AFIS |
| Oslo/Gardermoen | ENGM | H24 |
| | | RMK: NIL |
| Rena | ENRE | O/R |
| | | RMK: NIL |
| Rygge | ENRY | WEEK 33 - 18, MON: 0700 - 1900 (0600 - 1800), TUE - THU: 0700 - 2300 (0600 - 2200), FRI: 0700 - 1900 (0600 - 1800), SAT: 0800 - 1500 (0700 - 1400), SUN: NIL, WEEK 19 - 32, MON - FRI: 0700 - 1900 (0600 - 1800), SAT - SUN: 0900 - 1300 (0800 - 1200) |
| | | RMK: Outside HR of OPS, O/R to WingOps |
| Røros | ENRO | MON - FRI: 0530 - 1515 (0430 - 1415) / 1740 - 1810 (1640 - 1710), SAT: CLOSED, SUN: 1100 - 1820 (1000 - 1720) |
| | | RMK: NIL |

| | | |
|---------------------|------|--|
| Rørvik/Ryum | ENRM | MON - FRI: 0505 - 1325 (0405 - 1225) / 1340 - 2120 (1240 - 2020), SAT: 0940 - 1015 (0840 - 0915), SUN: 1205 - 2120 (1105 - 2020) |
| | | RMK: NIL |
| Røst | ENRS | MON: 0650 - 0830 (0550 - 0730) / 1830 - 2105 (1730 - 2005), TUE - THU: 0650 - 2105 (0550 - 2005), FRI: 0650 - 0830 (0550 - 0730) / 1830 - 2105 (1730 - 2005), SAT: 0650 - 1000 (0550 - 0900), SUN: 1830 - 2105 (1730 - 2005) |
| | | RMK: NIL |
| Sandane/Anda | ENSD | MON - FRI: 0440 - 2155 (0340 - 2055), SAT: 0640 - 1630 (0540 - 1530), SUN: 1030 - 1145 (0930 - 1045) / 1615 - 2155 (1515 - 2055) |
| | | RMK: NIL |
| Sandefjord/Torp | ENTO | MON - SAT: 0500 - 2200 (0400 - 2100), SUN: 0600 - 2200 (0500 - 2100) |
| | | RMK: NIL |
| Sandnessjøen/Stokka | ENST | MON - FRI: 0500 - 2215 (0400 - 2115), SAT: 0930 - 1300 (0830 - 1200), SUN: 1345 - 2215 (1245 - 2115) |
| | | RMK: NIL |
| Sogndal/Haukåsen | ENSG | MON - FRI: 0515 - 2100 (0415 - 2000), SAT: 0630 - 1130 (0530 - 1030) / 1450 - 1530 (1350 - 1430), SUN: 1300 - 2130 (1200 - 2030) |
| | | RMK: OPS HR above are core hours, REF NOTAM for possible adjustments. |
| Stavanger/Sola | ENZV | H24 |
| | | RMK: NIL |
| Stokmarknes/Skagen | ENSK | MON - WED: 0515 - 2015 (0415 - 1915), THU - FRI: 0450 - 2015 (0350 - 1915), SAT: 1000 - 1500 (0900 - 1400), SUN: 1000 - 2015 (0900 - 1915) |
| | | RMK: NIL |
| Stord/Sørstokken | ENSO | MON - FRI: 0500 - 1835 (0400 - 1735), SAT: CLOSED, SUN: 1045 - 1915 (0945 - 1815) |
| | | RMK: Outside opening HR HOSP/SAR OR. Extend HR of OPS OR TEL (+47) 53 40 37 13. |
| Svalbard/Longyear | ENSB | H24 |
| | | RMK: NIL |
| | | MON - FRI: 0535 - 2010 (0435 - 1910), SAT: 0955 - 1750 (0855 - 1650), SUN: 0955 - 2010 (0855 - 1910) |

| | | | |
|--------------------|------|--|--|
| Svolvær/Helle | ENSH | RMK: NIL | |
| | | MON - FRI: 0445 - 1945 (0345 - 1845), SAT: NIL, SUN: 1115 - 1315 (1015 - 1215) / 1645 - 1945 (1545 - 1845) | |
| Sørkjosen | ENSR | RMK: NIL | |
| | | H24 | |
| Tromsø/Langnes | ENTC | RMK: NIL | |
| | | H24 | |
| Trondheim/Værnes | ENVA | RMK: NIL | |
| | | MON - FRI: 0330 - 2325 (0230 - 2225), SAT: 0945 - 1735 (0845 - 1635), SUN: 1230 - 1430 (1130 - 1330) / 1600 - 2325 (1500 - 2225) | |
| Vadsø | ENVD | RMK: NIL | |
| | | MON - FRI: 0700 - 1845 (0600 - 1745), SAT: NIL, SUN: 1045 - 1300 (0945 - 1200) / 1700 - 1845 (1600 - 1745) | |
| Vardø/Svartnes | ENSS | RMK: NIL | |
| | | TWR: H24, APP: MON - FRI: 0800 - 1430 (0700 - 1330), SAT - SUN: NIL | |
| Ørland | ENOL | RMK: Outside detailed APP HR, APP service provided by TWR | |
| | | MON - FRI: 0445 - 2230 (0345 - 2130), SAT: 0645 - 1700 (0545 - 1600), SUN: 0915 - 1715 (0815 - 1615) / 1845 - 2230 (1745 - 2130) | |
| Ørsta-Volda/Hovden | ENOV | RMK: HOSP/SAR outside HR of OPS AVBL O/R VIA Polaris ACC Bodø | |
| | | MON - SUN: 0500 - 2230 (0400 - 2130) | |
| Ålesund/Vigra | ENAL | RMK: NIL | |

AD 2.3 Operational hours: Fuel

| AIRPORT | ICAO | HR |
|---------|------|--|
| Alta | ENAT | MON - FRI: 0500 - 1445 (0400 - 1345) / 1950 - 2100 (1850 - 2000), SAT: 1000 - 1600 (0900 - 1500), SUN: 0900 - 1300 (0800 - 1200) / 1950 - 2100 (1850 - 2000) |

| | | | |
|---------------------|------|---|--|
| | | RMK: | Within HR of SER: Air BP (+47) 917 22 590, Outside HR of SER: Air BP OOHS (+971) 5045 30326 / airbpoutofhours@bp.com |
| Andøya/Andenes | ENAN | MON - FRI: 0630 - 1430 (0530 - 1330), SAT - SUN: NIL | |
| | | RMK: | For public HOL contact FLO fuel (+47) 458 71 621 / bjojorgensen@mil.no. |
| Arendal/Gullknapp | ENGK | NIL | |
| | | RMK: | For fuel call (+47 911 69 727) |
| Bardufoss | ENDU | MON - FRI: 0430 - 1730 (0330 - 1630), SAT: 0800 - 1100 (0700 - 1000), SUN: 1100 - 1900 (1000 - 1800) | |
| | | RMK: | Outside these HR contact Air BP (+47) 458 72 157. Surcharge applies. |
| Bergen/Flesland | ENBR | MON - FRI: 0400 - 2200 (0300 - 2100), SAT: 0400 - 2000 (0300 - 1900), SUN: 0400 - 2230 (0300 - 2130) | |
| | | RMK: | Outside these HR O/R Flytanking AS (+47) 55 92 64 64 / (+47) 414 17 433. |
| Berlevåg | ENBV | AVBL O/R | |
| | | RMK: | NIL |
| Bodø | ENBO | JET A1: MON - FRI: 0330 - 2130 (0230 - 2030), SAT: 0530 - 1400 (0430 - 1300), SUN: 0900 - 2130 (0800 - 2030). 100LL: H24. F 34: MON - FRI: 0730 - 1530 (0630 - 1430). | |
| | | RMK: | JET A1: (+47) 75 52 03 79. F 34: (+47) 90 08 84 50. Surcharge applies outside HR of OPS. |
| Brønnøysund/Brønnøy | ENBN | MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0915 - 1515 (0815 - 1415), SUN: 1200 - 2200 (1100 - 2100) | |
| | | RMK: | Outside these HR O/R (+47) 48 28 13 83 |
| Båtsfjord | ENBS | NIL | |
| | | RMK: | NIL |
| Florø | ENFL | MON - THU: 0510 - 2030 (0410 - 1930), FRI: 0615 - 2030 (0515 - 1930), SAT: 1225 - 1720 (11:25 - 1620), SUN: 0815 - 0835 (0715 - 0735) / 1235 - 2030 (1135 - 1930) | |
| | | RMK: | NIL |
| Førde/Bringeland | ENBL | MON - FRI: 0450 - 2245 (0350 - 2145), SAT: 1100 - 1450 (1000 - 1350), SUN: 0950 - 1830 (0850 - 1730) / 2120 - 2250 (2020 - 2150) | |
| | | | |

| | | |
|--------------------------|------|---|
| | | RMK: For GA O/R via ATS |
| Hammerfest | ENHF | MON - FRI: 0505 - 2310 (0405 - 2210), SAT: 1150 - 1400 (1050 - 1300), SUN: 0935 - 2310 (0835 - 2210) |
| | | RMK: AVBL on 40 MIN REQ via Polaris ACC |
| Harstad/Narvik/Evenes | ENEV | MON - FRI: 0430 - 1930 (0330 - 1830), SAT: 0430 - 1330 (0330 - 1230), SUN: 0830 - 1930 (0730 - 1830) |
| | | RMK: Within HR of OPS (+47) 47 78 79 58 / eveaviationfuel@gmail.com |
| Hasvik | ENHK | NIL |
| | | RMK: NIL |
| Haugesund/Karmøy | ENHD | MON - FRI: 0500 - 1730 (0400 - 1630), SAT: 0530 - 1015 (0430 - 0915), SUN: 0645 - 0730 (0545 - 0630) / 1345 - 1930 (1245 - 1830) |
| | | RMK: AVBL OR Andersen Airport Service (+47) 52 84 04 70 / FAX (+47) 53 84 04 22 |
| Honningsvåg/Valan | ENHV | MON - FRI: 0435 - 2205 (0335 - 2105), SAT: CLOSED, SUN: 1130 - 1330 (1030 - 1230) / 2030 - 2205 (1930 - 2105) |
| | | RMK: NIL |
| Hønefoss/Eggemoen | ENEG | MON - FRI: 0600 - 1500 (0500 - 1400), SAT - SUN: NIL |
| | | RMK: RMK: EXC holidays |
| Kirkenes/Høybuktnoen | ENKR | MON - FRI: 0415 - 1915 (0315 - 1815), SAT: 0815 - 1115 (0715 - 1015), SUN: 1015 - 1915 (0915 - 1815) |
| | | RMK: AVBL O/R Air BP Norway AS (+47) 905 22 091. 30 MIN response time. Not AVBL outside HR of OPS. |
| Kjeller | ENKJ | NIL |
| | | RMK: NIL |
| Kristiansand/Kjevik | ENCN | MON - FRI: 0430 - 1830 (0330 - 1730), SAT: 0430 - 1700 (0330 - 1600), SUN: 0430 - 1830 (0330 - 1730) |
| | | RMK: JET A1: Outside opening HR O/R prior to closing. Tlf (+47) 38063416/ (+47) 22 54 00 50. AVGAS 100LL: Tlf: (+47) 38 06 34 16/ (+47) 33 45 24 22. Opening HR same as Jet A1. |
| Kristiansund/Kvernberget | ENKB | MON - FRI: 0545 - 1800 (0445 - 1700), SAT: 0600 - 0900 (0500 - 0800) / 1400 - 1700 (1300 - 1600), SUN: 1130 - 1600 (1030 - 1500) |
| | | RMK: Within HR of OPS Shell (+47) 90 76 68 49. |

| | | | |
|-------------------------|------|---|--|
| Lakselv/Banak | ENNA | MON - FRI: 0500 - 2315 (0400 - 2215), SAT: 0830 - 1300 (0730 - 1200), SUN: 1200 - 2315 (1100 - 2215) | |
| | | RMK: | Outside HR of OPS O/R AFSN (+47) 482 89 103 or Air BP +971 50 453 6032. |
| Leknes | ENLK | AVBL O/R | |
| | | RMK: | NIL |
| Mehamn | ENMH | MON - FRI: 0405 - 1220 (0305 - 1120) / 1610 - 2320 (1510 - 2220), SAT: NIL, SUN: 1705 - 2320 (1605 - 2220) | |
| | | RMK: | NIL |
| Mo I Rana/Røssvoll | ENRA | MON - FRI: 0500 - 2210 (0400 - 2110), SAT: 0800 - 1500 (0700 - 1400), SUN: 1225 - 2210 (1125 - 2110) | |
| | | RMK: | NIL |
| Molde/Årø | ENML | MON - THU: 0430 - 1630 (0330 - 1530), FRI: 0430 - 1730 (0330 - 1630), SAT: 0600 - 1430 (0500 - 1330), SUN: 1030 - 1630 (0930 - 1530) | |
| | | RMK: | Outside opening HR O/R via Molde Fuel Service (+47) 46 51 53 41 |
| Mosjøen/Kjærstad | ENMS | MON - FRI: 0350 - 2050 (0250 - 1950), SAT: 0820 - 1450 (0720 - 1350), SUN: 1020 - 2050 (0920 - 1950) | |
| | | RMK: | NIL |
| Namsos | ENNM | MON - FRI: 0500 - 2155 (0400 - 2055), SAT: CLOSED, SUN: 0830-1600 (0730 - 1500) / 2030 - 2200 (1930 - 2100) | |
| | | RMK: | Outside HR of SER: Air BP (+44) 20 3401 7247 / airbp247@bp.com |
| Notodden | ENNO | AVBL H24 | |
| | | RMK: | REF ENNO AD 2.20 |
| Ny Ålesund/ Hamnerabben | ENAS | No detailed OPS HR, AVBL O/R by prior permission | |
| | | RMK: | NIL |
| Oslo/Gardermoen | ENGM | JET A1: H24, F34: H24, 100LL: MON - FRI: AVBL O/R 0500 - 2300 (0400 - 2200), SAT: 0800 - 1700 (0700 - 1600), SUN: 1000 - 1900 (0900 - 1800) | |
| | | RMK: | 100LL: Within HR of OPS 1 HR prior notice to Sundt Air Handling (+47) 64 82 02 00 required Outside HR of OPS: (+47) 906 25 500. JET A1: H24: Gardermoen Fuelling Services AS, (+47) +64 81 08 10 / dispatch@gfs.no 0430 - 2230 (0330 - 2130): Skytanking, |

(+47) 64 82 14 30 / dispatch.osl@skytanking.com
F34: MIL OPS (+47) 64 80 33 35 / 124.435 MHZ.

| | | | |
|---------------------|------|--|---|
| Rena | ENRE | NIL | |
| | | RMK: | NIL |
| Rygge | ENRY | MON - FRI: 0700 - 1500 (0600 - 1400) EXC holidays, SAT - SUN: NIL | |
| | | RMK: | Outside HR of OPS, O/R to WingOps |
| Røros | ENRO | MON - FRI: 0530 - 1515 (0430 - 1415) / 1740 - 1810 (1640 - 1710), SAT: CLOSED, SUN: 1100 - 1820 (1000 - 1720) | |
| | | RMK: | Within HR of OPS Avinor (+47) 911 97 919 |
| Rørvik/Ryum | ENRM | MON - FRI: 0505 - 1325 (0405 - 1225) / 1340 - 2120 (1240 - 2020), SAT: 0940 - 1015 (0840 - 0915), SUN: 1205 - 2120 (1105 - 2020) | |
| | | RMK: | NIL |
| Røst | ENRS | NIL | |
| | | RMK: | Air BP sales out of hours (24H salg og ITR) +44 203 401 7247 / airbp247@bp.com |
| Sandane/Anda | ENSD | MON - FRI: 0440 - 2155 (0340 - 2055), SAT: 0640 - 1630 (0540 - 1530), SUN: 1030 - 1145 (0930 - 1045) / 1615 - 2155 (1515 - 2055) | |
| | | RMK: | NIL |
| Sandefjord/Torp | ENTO | Fuel truck AVBL from first SCHED DEP until last SCHED DEP | |
| | | RMK: | Within HR of OPS: Fuel coordinator (+47) 33 48 63 44. Outside HR of OPS: Fuel coordinator (+47) 905 71 097 / (+47) 907 32 943 / post@torpflytank.com. |
| Sandnessjøen/Stokka | ENST | MON - FRI: 0500 - 2215 (0400 - 2115), SAT: 0930 - 1300 (0830 - 1200), SUN: 1345 - 2215 (1245 - 2115) | |
| | | RMK: | NIL |
| Sogndal/Haukåsen | ENSG | MON - FRI: 0515 - 2100 (0415 - 2000), SAT: 0515 - 0915 (0415 - 0815), SUN: 1600 - 2100 (1500 - 2000) | |
| | | RMK: | OPS HR above are core hours, REF NOTAM for possible adjustments. For GA O/R via ATS |
| Stavanger/Sola | ENZV | MON - FRI: 0400 - 2100 (0300 - 2000), SAT: 0400 - 1800 (0300 - 1700), SUN: 0400 - 2100 (0300 - 2000) | |
| | | RMK: | Within HR of OPS (+47) 51 64 79 99 / (+47) 905 66 519. Outside HR of OPS: (+47) 905 66 520. |

| | | | |
|--------------------|------|--|---|
| Stokmarknes/Skagen | ENSK | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Stord/Sørstokken | ENSO | MON - FRI: 0500 - 1835 (0400 - 1735), SAT: CLOSED, SUN: 1045 - 1915 (0945 - 1815) | |
| | | RMK: | Outside HR of OPS TEL (+47) 913 44 862. |
| Svalbard/Longyear | ENSB | MON - FRI: 0830 - 1645 (0730 - 1545), SAT - SUN: 0830 - 1415 (0730 - 1315) | |
| | | RMK: | Excluding 24 and 25 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at acn@airportcoordination.com |
| Svolvær/Helle | ENSH | MON - TUE: 0400 - 2250 (0300 - 2150), WED - FRI: 0535 - 2250 (0435 - 2150), SAT: 0930 - 1250 (0830 - 1150), SUN: 1145 - 2250 (1045 - 2150) | |
| | | RMK: | NIL |
| Sørkjosen | ENSR | MON - FRI: 0445 - 1945 (0345 - 1845), SAT: NIL, SUN: 1115 - 1315 (1015 - 1215) / 1645 - 1945 (1545 - 1845) | |
| | | RMK: | NIL |
| Tromsø/Langnes | ENTC | MON - FRI: 0400 - 2200 (0300 - 2100), SAT: 0400 - 2000 (0300 - 1900), SUN: 0500 - 2200 (0400 - 2100) | |
| | | RMK: | Outside HR of OPS Flytanking AS (+47) 992 41 531. Surcharge applies outside HR of OPS. |
| Trondheim/Værnes | ENVA | MON - FRI: 0430 - 2100 (0330 - 2000), SAT: 0430 - 1800 (0330 - 1700), SUN: 0430 - 2100 (0330 - 2000) | |
| | | RMK: | JET A1 outside HR of OPS, Fuel coordinator TEL (+47) 74 83 46 40/ (+47) 911 76 530. Surcharge applies outside HR of OPS. 100LL H24 Self Service. Outside HR of OPS Flytanking AS (+47) 992 41 531. |
| Vadsø | ENVD | MON - FRI: 0330 - 2325 (0230 - 2225), SAT: 0945 - 1730 (0845 - 1630), SUN: 1230 - 1415 (1130 - 1315) / 1630 - 2325 (1530 - 2225) | |
| | | RMK: | NIL |
| Vardø/Svartnes | ENSS | MON - FRI: 0700 - 1845 (0600 - 1745), SAT: NIL, SUN: 1045 - 1300 (0945 - 1200) / 1700 - 1845 (1600 - 1745) | |
| | | RMK: | NIL |
| Ørland | ENOL | MON - FRI: 0630 - 1500 (0530 - 1400) EXC holidays, SAT - SUN: NIL | |
| | | RMK: | Outside HR of OPS, O/R (+47) 72 51 24 83 / (+47) 458 74 833. For CIV, payment by Air BP card only. |

| | | |
|--------------------|------|--|
| Ørsta-Volda/Hovden | ENOV | MON - FRI: 0445 - 2230 (0345 - 2130), SAT: 0645 - 1700 (0545 - 1600), SUN: 0915 - 1715 (0815 - 1615) / 1845 - 2230 (1745 - 2130) |
| | | RMK: HOSP/SAR outside HR of OPS AVBL O/R VIA Polaris ACC Bodø. AVGAS 100 LL AVBL after coordination with aero club, REF AD 2.20. |
| Ålesund/Vigra | ENAL | MON - SAT: 0400 - 2230 (0300 - 2130), SUN: 0400 - 2300 (0300 - 2200) |
| | | RMK: Outside opening HR O/R prior to closing. |

AD 2.3 Operational hours: Handling

| AIRPORT | ICAO | HR |
|-------------------|------|--|
| Alta | ENAT | MON - FRI: 0415 - 2200 (0315 - 2100), SAT: 1230 - 1830 (1130 - 1730), SUN: 0430 - 2215 (0330 - 2115) |
| | | RMK: Widerøe Ground Handling (+47) 417 06 995 |
| Andøya/Andenes | ENAN | MON - SUN: 0400 - 1115 (0300 - 1015) / 1315 - 1900 (1215 - 1800), MIL: No detailed OPS HR, AVBL O/R |
| | | RMK: CIV TFC: Widerøe Ground Handling (+47) 98 90 15 73/ andenes@wideroe.no, MIL TFC: FLO Forsyning Transport (Air Movement & Transportation) (+47) 77 89 66 00 / 77 89 66 40 / cargo.trans.flo@u.mil.no |
| Arendal/Gullknapp | ENGK | NIL |
| | | RMK: NIL |
| Bardufoss | ENDU | MON - FRI: 0730 - 1530 (0630 - 1430), SAT - SUN: O/R |
| | | RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu / MIL TFC FLO Forsyning Transport (Air Movement & Transportation) (+47) 77 89 66 00 / 77 89 66 40 / cargo.trans.flo@u.mil.no |
| Bergen/Flesland | ENBR | AVBL during HO |
| | | RMK: Aviator (+47) 982 98 400, GA Partner (+47) 938 15 000 / ops@gapa.no, Widerøe Ground Handling (+47) 64 82 65 02 |
| Berlevåg | ENBV | MON - FRI: 0600 - 2030 (0500 - 1930), SAT: NIL, SUN: 1100 - 1400 (1000 - 1300) / 1800 - 2030 (1700 - 1930) |
| | | RMK: NIL |
| Bodø | ENBO | AVBL during HO |
| | | RMK: Widerøe Ground Handling (+47) 417 06 802, Aviator (+47) 948 26 655 |

| | | |
|-----------------------|------|---|
| Brønnøysund/Brønnøy | ENBN | No detailed OPS HR, AVBL O/R |
| | | RMK: Widerøe Ground Handling (+47) 41 70 63 40 |
| Båtsfjord | ENBS | MON - FRI: 0530 - 2030 (0430 - 1930), SAT: NIL, SUN: 1030 - 1330 (0930 - 1230) / 1730 - 2030 (1630 - 1930) |
| | | RMK: Widerøe Ground Handling (+47) 948 85 740 / batsfjord@wideroe.no |
| Florø | ENFL | No detailed OPS HR, AVBL O/R |
| | | RMK: Widerøe Ground Handling (+47) 41 70 69 30 |
| Førde/Bringeland | ENBL | No detailed OPS HR, AVBL O/R |
| | | RMK: Contact (+47) 41 70 62 80 |
| Hammerfest | ENHF | No detailed OPS HR, AVBL O/R |
| | | RMK: Widerøe (+47) 67 03 50 89 |
| Harstad/Narvik/Evenes | ENEV | AVBL for scheduled flights. Otherwise O/R |
| | | RMK: WGH (+47) 41 70 68 50 / handling.eve@wideroe.no |
| Hasvik | ENHK | Available for scheduled flights |
| | | RMK: NIL |
| Haugesund/Karmøy | ENHD | No detailed OPS HR, AVBL O/R |
| | | RMK: Mandatory handling all international flights, REF https://flyhau.no/en/tariff-regulations / Aviator (+47) 400 02 444 / operations.hau@aviator.eu / (+47) 982 98 398 (Duty Manager), Widerøe Ground Handling (+47) 417 06 577 / handling.hau@wideroe.no |
| Honningsvåg/Valan | ENHV | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Hønefoss/Eggemoen | ENEG | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |

| | | | |
|--------------------------|------|------------------------------|---|
| Kirkenes/Høybuktnoen | ENKR | AVBL within ATS OPS HR | |
| | | RMK: | Widerøe Ground Handling handling.kkn@wideroe.no |
| Kjeller | ENKJ | NIL | |
| | | RMK: | NIL |
| Kristiansand/Kjevik | ENCN | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling |
| Kristiansund/Kvernberget | ENKB | NIL | |
| | | RMK: | No detailed OPR HR, AVBL O/R Widerøe Ground Handling TEL +47 417 06 255 / handling.ksu@wideroe.no |
| Lakselv/Banak | ENNA | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 989 01 364, OPS HR AVBL O/R to FLO Forsyning Transport / Air Movement & Transportation / Cargo.trans.flo@u.mil.no / (+47) 77 89 66 00 / (+47) 77 89 66 40 |
| Leknes | ENLK | O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 417 06 802 |
| Mehamn | ENMH | NIL | |
| | | RMK: | NIL |
| Mo I Rana/Røssvoll | ENRA | NIL | |
| | | RMK: | NIL |
| Molde/Årø | ENML | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 417 06 671 / handling.mol@wideroe.no, Aviator (+47) 976 65 268 / Operations.MOL@aviator.eu |
| Mosjøen/Kjærstad | ENMS | NIL | |
| | | RMK: | NIL |
| | | O/R | |

| | | | |
|-------------------------|------|--|--|
| Namsos | ENNM | RMK: NIL | |
| | | | |
| Notodden | ENNO | NIL | |
| | | RMK: | REF ENNO AD 2.20 |
| Ny Ålesund/ Hamnerabben | ENAS | NIL | |
| | | RMK: | NIL |
| Oslo/Gardermoen | ENGM | H24 | |
| | | RMK: | NIL |
| Rena | ENRE | NIL | |
| | | RMK: | NIL |
| Rygge | ENRY | AVBL | |
| | | RMK: | NIL |
| Røros | ENRO | No detailed OPS HR, AVBL O/R | |
| | | RMK: | AD ADMIN, Røros Flyservice (+47) 72 41 39 00 rrs@rfly.no |
| Rørvik/Ryum | ENRM | AVBL by prior arrangement | |
| | | RMK: | NIL |
| Røst | ENRS | NIL | |
| | | RMK: | NIL |
| Sandane/Anda | ENSD | MON - FRI: 0400 - 1200 (0300 - 1100) / 1530 - 2200 (1430 - 2100), SAT: 0600 - 1700 (0500 - 1600), SUN: 0930 - 1200 (0830 - 1100) / 1530 - 2200 (1430 - 2100) | |
| | | RMK: | NIL |
| Sandefjord/Torp | ENTO | No detailed OPS HR, AVBL | |
| | | RMK: | REF ENTO AD 2.20 |

| | | |
|---------------------|------|---|
| Sandnessjøen/Stokka | ENST | No detailed OPS HR, AVBL O/R |
| | | RMK: AD ADMIN |
| Sogndal/Haukåsen | ENSG | No detailed OPS HR, AVBL O/R |
| | | RMK: (+47) 41 70 62 90 |
| Stavanger/Sola | ENZV | H24 |
| | | RMK: Widerøe Ground Handling (+47) 64 82 65 02, Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu, SundtAir (+47) 400 41 010 / svg.handling@sundtair.com |
| Stokmarknes/Skagen | ENSK | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Stord/Sørstokken | ENSO | MON - FRI: 0600 - 1835 (0500 - 1735), SAT: CLOSED, SUN: 1145 - 1915 (1045 - 1815) |
| | | RMK: Handling TEL (+47) 53 40 37 00. |
| Svalbard/Longyear | ENSB | MON - FRI: 0830 - 1645 (0730 - 1545), SAT - SUN: 0830 - 1415 (0730 - 1315) |
| | | RMK: Excluding 24 and 25 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at acn@airportcoordination.com |
| Svolvær/Helle | ENSH | MON - WED: 0330 - 2135 (0230 - 2035), THU - FRI: 0415 - 2135 (0315 - 2035), SAT: 0730 - 1250 (0630 - 1150), SUN: 1130 - 1330 (1030 - 1230) / 1530 - 2135 (1430 - 2035) |
| | | RMK: NIL |
| Sørkjosen | ENSR | MON - FRI: No detailed OPS HR, AVBL O/R, SAT: NIL, SUN: O/R |
| | | RMK: NIL |
| Tromsø/Langnes | ENTC | AVBL for scheduled flights. Otherwise O/R |
| | | RMK: WGH (+47) 64 82 69 04 / handling.tos@wideroe.no, Aviator (+47) 77 28 04 00 / operations.tos@aviator.eu |
| Trondheim/Værnes | ENVA | AVBL for scheduled flights. Otherwise O/R |
| | | RMK: Aviator (+47) 74 60 20 10, WGH (+47) 64 82 67 10 |

| | | |
|--------------------|------|--|
| Vadsø | ENVN | MON - FRI: 0300 - 1330 (0200 - 1230) / 1500 - 2400 (1400 - 2300), SAT: 1030 - 1530 (0930 - 1430), SUN: 0800 - 1030 (0700 - 0930) / 1500 - 2400 (1400 - 2300) |
| | | RMK: NIL |
| Vardø/Svartnes | ENSS | MON - FRI: 0730 - 1230 (0630 - 1130) / 1700 - 2130 (1600 - 2030), SAT: NIL, SUN: 1700 - 2130 (1600 - 2030) |
| | | RMK: NIL |
| Ørland | ENOL | NIL |
| | | RMK: NIL |
| Ørsta-Volda/Hovden | ENOV | MON - FRI: 0445 - 2230 (0345 - 2130), SAT: 0645 - 1700 (0545 - 1600), SUN: 0915 - 1715 (0815 - 1615) / 1845 - 2230 (1745 - 2130) |
| | | RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no |
| Ålesund/Vigra | ENAL | No detailed OPS HR, AVBL |
| | | RMK: Widerøe Ground Handling (+47) 417 06 200 / handling.aes@wideroe.no, Aviator (+47) 70 30 25 60 / (+47) 922 00 472 / operations.aes@aviator.eu |

AD 2.3 Operational hours: Security

| AIRPORT | ICAO | HR |
|-------------------|------|--|
| Alta | ENAT | MON - FRI: 0415 - 2200 (0315 - 2100), SAT: 1230 - 1830 (1130 - 1730), SUN: 0430 - 2215 (0330 - 2115) |
| | | RMK: NIL |
| Andøya/Andenes | ENAN | MON - FRI: 0400 - 1900 (0300 - 1800), SAT: 0700 - 1330 (0600 - 1230), SUN: 1130 - 2000 (1030 - 1900) |
| | | RMK: NIL |
| Arendal/Gullknapp | ENGK | NIL |
| | | RMK: NIL |
| Bardufoss | ENDU | No detailed OPS HR, AVBL for OPR SCHED TFC |
| | | RMK: O/R outside HR of OPR SCHED TFC to CIV AD ADMIN |

| | | |
|-----------------------|------|--|
| Bergen/Flesland | ENBR | H24 |
| | | RMK: Avinor Securitiy (+47) 67 03 15 50 |
| Berlevåg | ENBV | MON - FRI: 0530 - 1400 (0430 - 1300) / 1800 - 2100 (1700 - 2000), SAT: NIL, SUN: 1100 - 1400 (1000 - 1300) / 1800 - 2100 (1700 - 2000) |
| | | RMK: NIL |
| Bodø | ENBO | H24 |
| | | RMK: Operations Centre (+47) 67 03 37 00 |
| Brønnøysund/Brønnøy | ENBN | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Båtsfjord | ENBS | MON - FRI: 0530 - 2030 (0430 - 1930), SAT: NIL, SUN: 1030 - 1330 (0930 - 1230) / 1730 - 2030 (1630 - 1930) |
| | | RMK: AVARN (+47) 468 98 630 |
| Florø | ENFL | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Førde/Bringeland | ENBL | No detailed OPS HR |
| | | RMK: NIL |
| Hammerfest | ENHF | No detailed OPS HR, AVBL O/R |
| | | RMK: Securitas (+47) 67 03 50 88 |
| Harstad/Narvik/Evenes | ENEV | HO, AVBL O/R |
| | | RMK: NIL |
| Hasvik | ENHK | Available for scheduled flights |
| | | RMK: NIL |
| Haugesund/Karmøy | ENHD | No detailed OPS HR, AVBL O/R |
| | | |

| | | |
|--------------------------|------|---|
| | | RMK: NIL |
| Honningsvåg/Valan | ENHV | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Hønefoss/Eggemoen | ENEG | No detailed OPS HR, AVBL by prior arrangement |
| | | RMK: NIL |
| Kirkenes/Høybuktnoen | ENKR | MON - FRI: 0300 - 1400 (0200 - 1300) / 1700 - 2000 (1600 - 1900), SAT: 0830 - 1130 (0730 - 1030), SUN: 0830 - 2200 (0730 - 2100) |
| | | RMK: NIL |
| Kjeller | ENKJ | NIL |
| | | RMK: NIL |
| Kristiansand/Kjevik | ENCN | MON - SUN: 0330 - 2100 (0230 - 2000) |
| | | RMK: NIL |
| Kristiansund/Kvernberget | ENKB | NIL |
| | | RMK: NIL |
| Lakselv/Banak | ENNA | MON, FRI: 0430 - 1700 (0330 - 1600) / 2000 - 2300 (1900 - 2200), TUE - THU: 0430 - 0700 (0330 - 0600) / 1130 - 1700 (1030 - 1600) / 2000 - 2300 (1900 - 2200), SAT: 0800 - 1300 (0700 - 1200), SUN: 1130 - 1700 (1030 - 1600) / 2000 - 2300 (1900 - 2200) |
| | | RMK: NIL |
| Leknes | ENLK | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Mehamn | ENMH | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Mo I Rana/Røssvoll | ENRA | MON - FRI: 0450 - 2210 (0350 - 2110), SAT: 0530 - 1330 (0430 - 1230), SUN: 0900 - 2200 (0800 - 2100) |
| | | RMK: NIL |

| | | | |
|-------------------------|------|--|----------|
| Molde/Årø | ENML | MON - FRI: 0400 - 2100 (0300 - 2000), SAT: 0500 - 1500 (0400 - 1400), SUN: 0830 - 2230 (0730 - 2130) | |
| | | RMK: | NIL |
| Mosjøen/Kjærstad | ENMS | NIL | |
| | | RMK: | NIL |
| Namsos | ENNM | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Notodden | ENNO | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Ny Ålesund/ Hamnerabben | ENAS | NIL | |
| | | RMK: | NIL |
| Oslo/Gardermoen | ENGM | H24 | |
| | | RMK: | NIL |
| Rena | ENRE | NIL | |
| | | RMK: | NIL |
| Rygge | ENRY | NIL | |
| | | RMK: | NIL |
| Røros | ENRO | No detailed OPS HR, AVBL O/R | |
| | | RMK: | AD ADMIN |
| Rørvik/Ryum | ENRM | No detailed OPS HR, AVBL by prior arrangement | |
| | | RMK: | NIL |
| Røst | ENRS | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |

| | | | |
|---------------------|------|--|---|
| Sandane/Anda | ENSD | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Sandefjord/Torp | ENTO | NIL | |
| | | RMK: | NIL |
| Sandnessjøen/Stokka | ENST | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Sogndal/Haukåsen | ENSG | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Stavanger/Sola | ENZV | H24 | |
| | | RMK: | Avinor Security (+47) 952 59 381 |
| Stokmarknes/Skagen | ENSK | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Stord/Sørstokken | ENSO | MON - FRI: 0600 - 1835 (0500 - 1735), SAT: CLOSED, SUN: 1145 - 1915 (1045 - 1815) | |
| | | RMK: | Extend HR of OPS O/R TEL (+47) 53 40 37 00. |
| Svalbard/Longyear | ENSB | MON - FRI: 0830 - 1645 (0730 - 1545), SAT - SUN: 0830 - 1415 (0730 - 1315) | |
| | | RMK: | Excluding 24 and 25 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at acn@airportcoordination.com |
| Svolvær/Helle | ENSH | MON - WED: 0330 - 2135 (0230 - 2035), THU - FRI: 0415 - 2135 (0315 - 2035), SAT: 0730 - 1250 (0630 - 1150), SUN: 1130 - 1330 (1030 - 1230) / 1530 - 2135 (1430 - 2035) | |
| | | RMK: | NIL |
| Sørkjosen | ENSR | MON - FRI: No detailed OPS HR, AVBL O/R, SAT: NIL, SUN: O/R | |
| | | RMK: | NIL |

| | | | |
|--------------------|------|--|---|
| Tromsø/Langnes | ENTC | MON - FRI: 0430 - 2300 (0330 - 2200), SAT - SUN: HO | |
| | | RMK: | NIL |
| Trondheim/Værnes | ENVA | H24 | |
| | | RMK: | Avinor Security (+47) 67 03 28 00 / Securitas (+47) 941 65 959 |
| Vadsø | ENVD | MON - FRI: 0300-2400 (0200 - 2300), SAT: 1000 - 1530 (0900 - 1430), SUN: 0800 - 1030 (0700 - 0930) / 1500 - 2400 (1400 2300) | |
| | | RMK: | NIL |
| Vardø/Svartnes | ENSS | MON - FRI: 0730 - 1230 (0630 - 1130) / 1700 - 2130 (1600 - 2030), SAT: NIL, SUN: 1700 - 2130 (1600 - 2030) | |
| | | RMK: | NIL |
| Ørland | ENOL | NIL | |
| | | RMK: | NIL |
| Ørsta-Volda/Hovden | ENOV | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Avarn Security Aviation AS (+47) 475 00 028 / lin.sande@avarnsecurity.com |
| Ålesund/Vigra | ENAL | MON - SAT: 0500 - 2230 (0400 - 2130), SUN: 0400 - 2300 (0300 - 2200) | |
| | | RMK: | NIL |

AD 2.3 Operational hours: De-Icing

| AIRPORT | ICAO | HR | |
|-------------------|------|------------------------------|---|
| Alta | ENAT | AVBL O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 417 06 931 / (+47) 417 06 962 |
| Andøya/Andenes | ENAN | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Arendal/Gullknapp | ENGK | NIL | |
| | | | |

| | | | |
|-----------------------|------|--|---|
| | | RMK: | NIL |
| Bardufoss | ENDU | No detailed OPS HR, AVBL O/R | |
| | | RMK: | CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu Limited to ACFT max height 17 M / MIL TFC Base/Wing Ops, (+47) 77 89 62 52 Limited to ACFT max height 17 M |
| Bergen/Flesland | ENBR | 01 OCT - 30 APR AVBL H24 / 01 MAY - 30 SEP AVBL O/R de-ice operator | |
| | | RMK: | Aviator De-icing 0515 - 2315 (0415 - 2215) (+47) 920 41 009 / Widerøe Ground Handling 0530 - 2300 (0430 - 2200) O/R 2300 - 0530 (2200 - 0430) (+47) 64 82 85 02 |
| Berlevåg | ENBV | MON - FRI: 0600 - 2030 (0500 - 1930), SAT: NIL, SUN: 1100 - 1400 (1000 - 1300) / 1800 - 2030 (1700 - 1930) | |
| | | RMK: | NIL |
| Bodø | ENBO | HO | |
| | | RMK: | Widerøe Ground Handling (+47) 417 06 818, Aviator Airport Alliance ENBO (+47) 948 26 655 |
| Brønnøysund/Brønnøy | ENBN | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling(+47) 41 70 63 40 |
| Båtsfjord | ENBS | MON - FRI: 0530 - 2030 (0430 - 1930), SAT: NIL, SUN: 1030 - 1330 (0930 - 1230) / 1730 - 2030 (1630 - 1930) | |
| | | RMK: | AVBL O/R BTN OCT - JUN, Widerøe Ground Handling (+47) 948 85 740 / batsfjord@wideroe.no |
| Florø | ENFL | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 41 70 69 30 |
| Førde/Bringeland | ENBL | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Hammerfest | ENHF | No detailed OPS HR, AVBL O/R | |
| | | RMK: | NIL |
| Harstad/Narvik/Evenes | ENEV | No detailed OPS, AVBL O/R | |
| | | RMK: | WGH (+47) 41 70 68 50 / handling.eve@wideroe.no |

| | | |
|--------------------------|------|---|
| Hasvik | ENHK | Available for scheduled flights |
| | | RMK: AVBL for HOSP/SAR O/R via Hasvik AFIS |
| Haugesund/Karmøy | ENHD | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Honningsvåg/Valan | ENHV | No detailed OPS HR, AVBL O/R |
| | | RMK: NIL |
| Hønefoss/Eggemoen | ENEG | NIL/td> |
| | | RMK: NIL |
| Kirkenes/Høybuktnoen | ENKR | Within ATS OPS, AVBL O/R |
| | | RMK: Widerøe Ground Handling handling.kkn@wideroe.no |
| Kjeller | ENKJ | NIL |
| | | RMK: NIL |
| Kristiansand/Kjevik | ENCN | No detailed OPS HR, AVBL O/R |
| | | RMK: Widerøe Ground Handling |
| Kristiansund/Kvernberget | ENKB | NIL |
| | | RMK: No detailed OPR HR, AVBL O/R Widerøe Ground Handling TEL +47 417 06 255 / handling.ksu@wideroe.no |
| Lakselv/Banak | ENNA | No detailed OPS HR, AVBL O/R |
| | | RMK: Widerøe Ground Handling (+47) 989 01 364 |
| Leknes | ENLK | No detailed OPS HR, AVBL O/R |
| | | RMK: Widerøe Ground Handling (+47) 41 70 62 28 |
| Mehamn | ENMH | NIL |
| | | |

| | | | |
|-------------------------|------|--|--|
| | | RMK: | NIL |
| Mo I Rana/Røssvoll | ENRA | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 989 01 355 |
| Molde/Årø | ENML | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 417 06 671 / handling.mol@wideroe.no |
| Mosjøen/Kjærstad | ENMS | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Gorund Handling |
| Namsos | ENNM | No detailed OPS HR, AVBL for SCHED TFC and AMB | |
| | | RMK: | NIL |
| Notodden | ENNO | NIL | |
| | | RMK: | NIL |
| Ny Ålesund/ Hamnerabben | ENAS | NIL | |
| | | RMK: | NIL |
| Oslo/Gardermoen | ENGM | H24 | |
| | | RMK: | REF ENGM AD 2.20 para 11 |
| Rena | ENRE | NIL | |
| | | RMK: | NIL |
| Rygge | ENRY | No detailed OPR HR, AVBL O/R | |
| | | RMK: | NIL |
| Røros | ENRO | No detailed OPR HR, AVBL O/R | |
| | | RMK: | AVBL O/R Røros Flyservice (+47) 72 41 39 00 rrs@rfly.no |
| | | No detailed OPS HR, AVBL O/R | |

| | | | |
|---------------------|------|--|--|
| Rørvik/Ryum | ENRM | RMK: | AVBL by prior arrangement |
| | | No detailed OPS HR, AVBL O/R | |
| Røst | ENRS | RMK: | NIL |
| | | No detailed OPS HR, AVBL O/R | |
| Sandane/Anda | ENSD | RMK: | NIL |
| | | MON - SAT: 0500 - 2200 (0400 - 2100), SUN: 0600 - 2200 (0500 - 2100) | |
| Sandefjord/Torp | ENTO | RMK: | REF ENTO AD 2.20 |
| | | No detailed OPS HR, AVBL O/R | |
| Sandnessjøen/Stokka | ENST | RMK: | NIL |
| | | No detailed OPS HR, AVBL O/R | |
| Sogndal/Haukåsen | ENSG | RMK: | Widerøe Ground Handling (+47) 417 06 290 |
| | | H24 | |
| Stavanger/Sola | ENZV | RMK: | SGS (+47) 957 19 657 / Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu |
| | | No detailed OPS HR, AVBL O/R | |
| Stokmarknes/Skagen | ENSK | RMK: | (+47) 989 01 457 |
| | | MON - FRI: 0600 - 1835 (0500 - 1735), SAT: CLOSED, SUN: 1145 - 1915 (1045 - 1815) | |
| Stord/Sørstokken | ENSO | RMK: | De-icing TEL (+47) 53 40 37 12. |
| | | MON - FRI: 0830 - 1645 (0730 - 1545), SAT - SUN: 0830 - 1415 (0730 - 1315) | |
| Svalbard/Longyear | ENSB | RMK: | Excluding 24 and 25 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at acn@airportcoordination.com |
| | | MON - WED: 0330 - 2135 (0230 - 2035), THU - FRI: 0415 - 2135 (0315 - 2035), SAT: 0730 - 1250 (0630 - 1150), SUN: 1130 - 1330 (1030 - 1230) / 1530 - 2135 (1430 - 2035) | |
| Svolvær/Helle | ENSH | | |
| | | | |

| | | | |
|--------------------|------|--|--|
| | | RMK: | NIL |
| Sørkjosen | ENSR | MON - FRI: No detailed OPS HR, AVBL O/R, SAT: NIL, SUN: O/R/td> | |
| | | RMK: | NIL |
| Tromsø/Langnes | ENTC | WGH OPS HR AVBL O/R. Aviator OPS HR SUN - THU: 0430 - 2100 (0330 - 2000), FRI: 0430 - 2000 (0330 - 1900), SAT: 0500 - 1930 (0400 - 1830) | |
| | | RMK: | WGH (+47) 417 06 870, Aviator (+47) 458 67 982 (day), (+47) 413 06 810 (night) |
| Trondheim/Værnes | ENVA | AVBL for scheduled flights. Otherwise O/R. | |
| | | RMK: | WGH De-icing (+47) 417 06 713 (day) / (+47) 417 06 719 (night) / Aviator De-icing (+47) 910 02 980 |
| Vadsø | ENVD | MON - FRI: 0300 - 1330 (0200 - 1230) / 1500 - 2400 (1400 - 2300), SAT: 1030 - 1530 (0930 - 1430), SUN: 0800 - 1030 (0700 - 0930) / 1500 - 2400 (1400 - 2300) | |
| | | RMK: | NIL |
| Vardø/Svartnes | ENSS | MON - FRI: 0730 - 1230 (0630 - 1130) / 1700 - 2130 (1600 - 2030), SAT: NIL, SUN: 1700 - 2130 (1600 - 2030) | |
| | | RMK: | NIL |
| Ørland | ENOL | NIL | |
| | | RMK: | NIL |
| Ørsta-Volda/Hovden | ENOV | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no |
| Ålesund/Vigra | ENAL | No detailed OPS HR, AVBL O/R | |
| | | RMK: | Widerøe Ground Handling (+47) 417 06 204, Aviator (+47) 922 00 472 |

AD 2.6 Operational hours: Rescue and fire fighting service

| AIRPORT | ICAO | HR | |
|---------|------|-------|----------------------------|
| | | CAT 4 | Outside published HR CAT 7 |

| | | | |
|---------------------|------|---------------------------|--|
| Alta | ENAT | CAT 5 | FRI: 2000 - 2200 (1900 - 2100) |
| | | CAT 7 | MON - THU: 0530 - 2200 (0430 - 2100), FRI: 0530 - 1430 (0430 - 1330), SAT: 1715 - 1830 (1615 - 1730), SUN: 0600 - 2200 (0500 - 2100) |
| Andøya/Andenes | ENAN | CAT 4 | MON - SUN: Outside airport HR of OPS |
| | | CAT 5 | MON - FRI: 0430 - 2100 (0330 - 2000), SAT: 0700 - 1100 (0600 - 1000), SUN: 0900 - 2100 (0800 - 2000) |
| | | CAT 6 | O/R ATC MNM 48 HR prior to ETA |
| | | CAT 7 | |
| | | CAT 8 | |
| Arendal/Gullknapp | ENGK | NIL | NIL |
| Bardufoss | ENDU | CAT 7 / MIL NATO CAT 6 | H24 |
| | | CAT 8 / MIL NATO CAT 7 | O/R ATC MNM 24 HR prior to ETA |
| | | CAT 9 / MIL NATO CAT 8 | O/R ATC MNM 24 HR prior to ETA |
| Bergen/Flesland | ENBR | CAT 7 | H24 |
| | | CAT 9 | O/R ATC MNM 30 MIN prior to ETA |
| Berlevåg | ENBV | CAT 4 | MON - FRI: 0600 - 2030 (0500 - 1930), SAT: NIL, SUN: 1100 - 1400 (1000 - 1300) / 1800 - 2030 (1700 - 1930) |
| Bodø | ENBO | CAT 7 | H24 |
| | | CAT 9 | AVBL O/R 24 HR prior ETA |
| Brønnøysund/Brønnøy | ENBN | CAT 5 | MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0915 - 1515 (0815 - 1415), SUN: 1200 - 2200 (1100 - 2100) |
| | | RMK | NIL |
| Båtsfjord | ENBS | CAT 4 | MON - FRI: 0600 - 2015 (0500 - 1915), SAT: NIL, SUN: 1115 - 2015 (1015 - 1915) |
| | | | MON - FRI: 0410 - 2130 (0310 - 2030), SAT: 1200 - 1215 (1100 - 1115) / 1530 - 1700 (1430 - 1600), SUN: 1200 |

| | | | |
|-----------------------|------|-------|--|
| Florø | ENFL | CAT 4 | - 1215 (1100 - 1115) / 1630 - 2130 (1530 - 2030) |
| | | RMK | Airport operates on RFFS category 4. Aircrafts with higher RFFS category is operated with one RFFS category below the aeroplane category, due to number of movements are less than 700 in the busiest consecutive three months. Ref. ICAO Annex 6. |
| Førde/Bringeland | ENBL | CAT 4 | MON - FRI: 0450 - 0845 (0350 - 0745) / 1150 - 1250 (1050 - 1150) / 1450 - 1550 (1350 - 1450) / 1850 - 1950 (1750 - 1850) / 2150 - 2230 (2050 - 2130), SAT: 0550 - 0630 (0450 - 0530) / 1150 - 1530 (1050 - 1430), SUN: 0750 - 0830 (0650 - 0730) / 1150 - 1250 (1050 - 1150) / 1450 - 1550 (1350 - 1450) / 1850 - 1950 (1750 - 1850) / 2150 - 2230 (2050 - 2130) |
| | | RMK | For SKED TFC only. Other TFC O/R |
| Hammerfest | ENHF | CAT 4 | MON - FRI: 0505 - 2310 (0405 - 2210), SAT: 1150 - 1400 (1050 - 1300), SUN: 0935 - 2310 (0835 - 2210) |
| | | RMK: | AVBL on 40 MIN REQ via Polaris ACC |
| Harstad/Narvik/Evenes | ENEV | CAT 7 | H24 |
| | | CAT 9 | O/R to operator/handling agent MNM 12 HR prior to ETA |
| Hasvik | ENHK | CAT 4 | MON - FRI: 0630 - 2000 (0530 - 1900), SAT: NIL, SUN: 1330 - 1530 (1230 - 1430) / 1830 - 2000 (1730 - 1900) |
| Haugesund/Karmøy | ENHD | CAT 4 | Outside published CAT 7 HR of OPR |
| | | CAT 7 | MON - FRI: 0520 - 2100 (0420 - 2000), SAT: 0600 - 2100 (0500 - 2000), SUN: 0700 - 2230 (0600 - 2130) |
| Honningsvåg/Valan | ENHV | CAT 4 | MON - FRI: 0435 - 2205 (0335 - 2105), SAT: CLSD, SUN: 1130 - 1330 (1030 - 1230) / 2030 - 2205 (1930 - 2105) |
| Hønefoss/Eggemoen | ENEG | CAT 4 | O/R |
| Kirkenes/Høybuktnoen | ENKR | CAT 4 | Outside published CAT 7 HR of OPR |
| | | CAT 7 | MON - FRI: 0600 - 2200 (0500 - 2100), SAT: 0800 - 1500 (0700 - 1400), SUN: 0800 - 2200 (0700 - 2100) |
| Kjeller | ENKJ | CAT 6 | O/R for MIL operations |
| Kristiansand/Kjevik | ENCN | CAT 4 | Outside published CAT 7 HR of OPR |
| | | CAT 7 | MON - SAT: 0500 - 2205 (0400 - 2105), SUN: 0500 - 2245 (0400 - 2145) / Outside published CAT 7 HR of OPR, O/R ATC MNM 1 HR prior to ETA |

| | | | |
|--------------------------|------|-------|--|
| | | CAT 8 | O/R ATC MNM 1 HR prior to ETA |
| Kristiansund/Kvernberget | ENKB | CAT 7 | MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0900 - 1600 (0800 - 1500), SUN: 1100 - 2200 (1000 - 2100) |
| Lakselv/Banak | ENNA | CAT 4 | MON - SUN: Outside airport HR of OPS |
| | | CAT 5 | MON: 0500 - 0800 (0400 - 0700) / 1200 - 2315 (1100 - 2215), TUE - THU: 0500 - 2315 (0400 - 2215), FRI: 0500 - 0800 (0400 - 0700) / 1200 - 2315 (1100 - 2215), SAT: 0830 - 1300 (0730 - 1200), SUN: 1200 - 2315 (1100 - 2215) |
| | | CAT 7 | MON: 0800 - 1200 (0700 - 1100), FRI: 0800 - 1200 (0700 - 1100), and O/R ATC MNM 2 HR prior to ETA during airport HR of OPS |
| | | CAT 8 | O/R ATC MNM 48 HR prior to ETA |
| | | CAT 9 | |
| Leknes | ENLK | CAT 4 | MON - FRI: 0535 - 2255 (0435 - 2155), SAT: 0750 - 1610 (0650 - 1510), SUN: 1000 - 1750 (0900 - 1650) / 1920 - 2255 (1820 - 2155) |
| Mehamn | ENMH | CAT 4 | MON - FRI: 0405 - 1220 (0305 - 1120) / 1610 - 2320 (1510 - 2220), SAT: NIL, SUN: 1705 - 2320 (1605 - 2220) |
| Mo I Rana/Røssvoll | ENRA | CAT 4 | MON - FRI: 0500 - 2210 (0400 - 2110), SAT: 0800 - 1500 (0700 - 1400), SUN: 1225 - 2210 (1125 - 2110) |
| Molde/Årø | ENML | CAT 7 | MON - FRI: 0505 - 2100 (0405 - 2000), SAT: 0600 - 1500 (0500 - 1400), SUN: 0930 - 2250 (0830 - 2150) |
| | | RMK: | HOSP/SAR outside HR of OPS AVBL O/R 40 MIN prior notice via Polaris ACC |
| Mosjøen/Kjærstad | ENMS | CAT 4 | MON - FRI: 0350 - 2050 (0250 - 1950), SAT: 0350 - 1450 (0250 - 1350), SUN: 1020 - 2050 (0920 - 1950) |
| Namsos | ENNM | CAT 4 | MON - FRI: 0500 - 2155 (0400 - 2055), SAT: CLOSED, SUN: 0830 - 1600 (0730 - 1500) / 2030 - 2200 (1930 - 2100) |
| | | RMK: | NIL |
| Notodden | ENNO | CAT 3 | O/R |
| Ny Ålesund/ Hamnerabben | ENAS | CAT 3 | Within AFIS HR of SER |
| Oslo/Gardermoen | ENGM | CAT 9 | H24 |
| Rena | ENRE | NIL | NIL |

| | | | |
|---------------------|------|---------------------------|--|
| Rygge | ENRY | CAT 4 / MIL NATO CAT 3 | H24 |
| | | CAT 7 / MIL NATO CAT 6 | MON - FRI: 0700 - 1900 (0600 - 1800) |
| Røros | ENRO | CAT 4 | MON - FRI: 0530 - 1515 (0430 - 1415) / 1740 - 1810 (1640 - 1710), SAT: CLOSED, SUN: 1100 - 1820 (1000 - 1720) / For SKED TFC and charter TFC. Other TFC on 10 MIN prior request. |
| | | CAT 5 | AVBL O/R ATS MNM 48 HR prior to ETA |
| | | CAT 6 | |
| Rørvik/Ryum | ENRM | CAT 4 | MON - FRI: 0505 - 1325 (0405 - 1225) / 1340 - 2120 (1240 - 2020), SAT: 0940 - 1015 (0840 - 0915), SUN: 1205 - 2120 (1105 - 2020) |
| Røst | ENRS | CAT 4 | MON: 0650 - 0830 (0550 - 0730) / 1830 - 2055 (1730 - 1955), TUE - THU: 0650 - 2055 (0550 - 1955), FRI: 0650 - 0830 (0550 - 0730) / 1830 - 2055 (1730 - 1955), SAT: 0650 - 1000 (0550 - 0900), SUN: 1730 - 2055 (1630 - 1955) |
| Sandane/Anda | ENSD | CAT 4 | MON - FRI: 0440 - 2155 (0340 - 2055), SAT: 0640 - 1630 (0540 - 1530), SUN: 1030 - 1145 (0930 - 1045) / 1615 - 2155 (1515 - 2055) |
| Sandefjord/Torp | ENTO | CAT 7 | MON - SAT: 0500 - 2200 (0400 - 2100), SUN: 0600 - 2200 (0500 - 2100) |
| Sandnessjøen/Stokka | ENST | CAT 4 | MON - FRI: 0500 - 2215 (0400 - 2115), SAT: 0930 - 1300 (0830 - 1200), SUN: 1345 - 2215 (1245 - 2115) |
| Sogndal/Haukåsen | ENSG | CAT 4 | MON - FRI: 0510 - 0845 (0410 - 0745) / 1350 - 1430 (1250 - 1330), 1650 - 2130 (1550 - 2030), SAT: 0750 - 1030 (0650 - 0930) / 1450 - 1530 (1350 - 1430), SUN: 1350 - 1430 (1250 - 1330) / 1650 - 2130 (1550 - 2030) |
| | | RMK | For SKED TFC only. Other TFC O/R |
| Stavanger/Sola | ENZV | CAT 7 | H24 |
| | | CAT 9 | O/R ATC MNM 30 MIN prior to ETA |
| Stokmarknes/Skagen | ENSK | CAT 4 | MON - WED: 0515 - 2015 (0415 - 1915), THU - FRI: 0450 - 2015 (0350 - 1915), SAT: 1000 - 1500 (0900 - 1400), SUN: 1000 - 2015 (0900 - 1915) |
| Stord/Sørstokken | ENSO | CAT 4 | MON - FRI: 0500 - 1835 (0400 - 1735), SAT: CLOSED, SUN: 1045 - 1915 (0945 - 1815) / Outside HR of OPS TEL (+47) 913 44 862. |
| | | | |

| | | | |
|--------------------|------|----------|---|
| | | CAT 5 | AVBL O/R ATS MNM 48 HR prior to ETA. |
| | | CAT 6 | |
| Svalbard/Longyear | ENSB | CAT 4, 7 | MON - FRI: 0830 - 1645 (0730 - 1545), SAT, SUN: 1030 - 1415 (0930 - 1315) |
| | | RMK | Excluding 24, 25 and 26 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at acn@airportcoordination.com |
| Svolvær/Helle | ENSH | CAT 4 | MON - TUE: 0400 - 2250 (0300 - 2150), WED - FRI: 0535 - 2250 (0435 - 2150), SAT: 0930 - 1250 (0830 - 1150), SUN: 1145 - 2250 (1045 - 2150) |
| Sørkjosen | ENSR | CAT 4 | MON - FRI: 0445 - 1945 (0345 - 1845), SAT: NIL, SUN: 1130 - 1330 (1030 - 1230) / 1530 - 2135 (1430 - 2035) |
| Tromsø/Langnes | ENTC | CAT 4 | MON - SUN: 2300 - 0500 (2200 - 0400) |
| | | CAT 7 | MON - SUN: 0500 - 2300 (0400 - 2200) |
| Trondheim/Værnes | ENVA | CAT 7 | H24 |
| | | CAT 9 | O/R ATC MNM 30 MIN prior to ETA |
| Vadsø | ENVD | CAT 4 | MON - FRI: 0330 - 2325 (0230 - 2225), SAT: 0945 - 1730 (0845 - 1630), SUN: 1230 - 1415 (1130 - 1315) / 1630 - 2325 (1530 - 2225) |
| Vardø/Svartnes | ENSS | CAT 4 | MON - FRI: 0700 - 1845 (0600 - 1745), SAT: NIL, SUN: 1045 - 1300 (0945 - 1200) / 1700 - 1845 (1600 - 1745) |
| Ørland | ENOL | CAT 6 | H24 |
| | | CAT 9 | AVBL O/R. Please inform if required, when applying for PPR, REF AD 2.20 |
| Ørsta-Volda/Hovden | ENOV | CAT 4 | MON - FRI: 0445 - 2230 (0345 - 2130), SAT: 0645 - 1700 (0545 - 1600), SUN: 0915 - 1715 (0815 - 1615) / 1845 - 2230 (1745 - 2130) |
| | | RMK | HOSP/SAR OUTSIDE HR OF OPS AVBL O/R VIA Polaris ACC Bodø |
| Ålesund/Vigra | ENAL | CAT 4 | AVBL O/R outside CAT 7 HRS of OPR |
| | | CAT 7 | MON - SUN: 0500 - 2230 (0400 - 2130) |
| | | CAT 8 | AVBL O/R 24 HR prior ETA |

AD 3.3/6 Operational hours

| AIRPORT | ICAO | HR | |
|-------------|------|--------------------------|--|
| Haakonsværn | ENBH | AD administration | MON - FRI: 0630 - 1430 (0530 - 1330), SAT - SUN: NIL |
| | | Customs and immigration | NIL |
| | | MET | NIL |
| | | ATS | NIL |
| | | FUEL | No detailed OPR HR, AVBL O/R (+47) 917 72 777 |
| | | Handling | NIL |
| | | Security | NIL |
| | | De-Icing | NIL |
| | | Rescue and Fire fighting | CAT 3: MON - FRI: 0630 - 1430 (0530 - 1330), SAT - SUN: NIL. RMK: Outside OPR HR AVBL O/R (+47) 917 72 777 |
| Værøy | ENVR | AD administration | MON - FRI: 0630 - 1100 (0530 - 1000) / 1330 - 1700 (1230 - 1600), SAT: 0630 - 1100 (0530 - 1000), SUN: 1330 - 1700 (1230 - 1600) |
| | | Customs and immigration | NIL |
| | | MET | O/R MWO Tromsø TEL (+47) 77 62 13 00 |
| | | ATS | FIS AVBL H24 via Bodø ATCC |
| | | FUEL | NIL |
| | | Handling | No detailed OPS HR, AVBL O/R. RMK: AD ADMIN |
| | | Security | O/R ADMIN |
| | | De-Icing | NIL |
| | | Rescue and Fire fighting | CAT H2: MON - FRI: 0645 - 1045 (0545 - 0945) / 1345 - 1645 (1245 - 1545), SAT: 0645 - 1045 (0545 - 0945), SUN: 1345 - 1645 (1245 - 1545) |