

# OPERATIONAL HOURS

**In order to ensure clarity and avoid misunderstandings caused by the application of daylight saving time in Norway, which causes a difference in relation between UTC and local time during summer and winter periods, starting with 23 JAN 2025 Avinor will publish all times as winter time, with summer time in brackets, in AIP Norway, associated publications and AIS Portal.**

- Co-ordinated Universal Time (UTC) and the Gregorian calendar are used by air navigation services and in publications issued by the Norwegian Aeronautical Information Service. Reporting of time is expressed to the nearest minute, e.g. 12:40:35 is reported as 12:41.

Due to the application of daylight saving time in Norway, the relation between UTC and local time is different during summer and winter period. The summer period starts every year on the last SUN of MAR at 0100 UTC and ends on the last SUN of OCT at 0100 UTC. During the winter period, local time is UTC + 1 HR. During the summer period, local time is UTC + 2 HR.

In the AIP Norway, associated publications and AIS Portal, UTC times applicable during the summer period will be added between brackets.

- Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.
- Changes since last revision are highlighted in yellow

Revised per AIRAC 14 MAY 2026

[Download PDF](#)

Filter AD

## AD 2.3 Operational hours: Admin

AIRPORT	ICAO	HR
Alta	ENAT	MON - FRI: 0700 - 1430 (0600 - 1330), SAT - SUN: NIL
Andøya/Andenes	ENAN	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Arendal/Gullknapp	ENGK	NIL
Bardufoss	ENDU	CIV: MON - FRI: 0700 - 1500 (0600 - 1400) EXC holidays, SAT - SUN: NIL, MIL: H24 via Base/Wing Ops
Bergen/Flesland	ENBR	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL

[Back to top](#)

Berlevåg	ENBV	MON - FRI: 15 MAY - 15 SEP: 0700 - 1400 (0600 - 1300) EXC holidays / 16 SEP - 14 MAY: 0700 - 1445 (0600 - 1345) EXC holidays, SAT - SUN: NIL
Bodø	ENBO	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Brønnøysund/Brønnøy	ENBN	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Båtsfjord	ENBS	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Florø	ENFL	MON - FRI: 0510 - 2030 (0410 - 1930), SAT: 0805 - 1730 (0705 - 1630), SUN: 0820 - 0850 (0720 - 0750)
Førde/Bringeland	ENBL	MON - FRI: 0800 - 1500 (0700 - 1400) EXC holidays, SAT - SUN: NIL
Hammerfest	ENHF	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Harstad/Narvik/Evenes	ENEV	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Hasvik	ENHK	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Haugesund/Karmøy	ENHD	MON - FRI: 0900 - 1200 (0800 - 1100) EXC holidays, SAT - SUN: NIL
Honningsvåg/Valan	ENHV	MON - FRI: 0700 - 1500 (0600 - 1400) EXC holidays, SAT - SUN: NIL
Hønefoss/Eggemoen	ENEG	MON - FRI: 0600 - 1500 (0500 - 1400) EXC holidays, SAT - SUN: NIL
Kirkenes/Høybuktkmoen	ENKR	MON - FRI: 0600 - 1500 (0500 - 1400) EXC holidays, SAT - SUN: NIL
Kjeller	ENKJ	NIL
Kristiansand/Kjevik	ENCN	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Kristiansund/Kvernberget	ENKB	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Lakselv/Banak	ENNA	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Leknes	ENLK	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Mehamn	ENMH	MON - FRI: 0350 - 1410 (0250 - 1310) / 1530 - 2230 (1430 - 2130), SAT: 0450 - 0700 (0350 - 0600) / 1120 - 1400 (1020 - 1300), SUN: 1520 - 2230 (1420 - 2130)
Mo I Rana/Røssvoll	ENRA	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL

Molde/Årø	ENML	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
		RMK: <a href="mailto:post@avinor.no">post@avinor.no</a>
Mosjøen/Kjærstad	ENMS	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Namsos	ENNM	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Notodden	ENNO	MON - FRI: 0800 - 1500 (0700 - 1400) EXC holidays, SAT - SUN: NIL
Ny Ålesund	ENAS	MON - FRI: 0700 - 1100 (0600 - 1000) / 1200 - 1530 (1100 - 1430) EXC holidays, SAT - SUN: NIL
Oslo/Gardermoen	ENGM	MON - FRI: 0700 - 1500 (0600 - 1400), SAT - SUN: NIL
Rena	ENRE	MON - FRI: 0800 - 1500 (0700 - 1400), SAT - SUN: NIL. EXC holidays.
Rygge	ENRY	H24
Røros	ENRO	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Rørvik/Ryum	ENRM	NIL
Røst	ENRS	MON - FRI: 0700 - 1500 (0600 - 1400) EXC holidays, SAT - SUN: NIL
Sandane/Anda	ENSD	MON - FRI: 0730 - 1500 (0630 - 1400) EXC holidays, SAT - SUN: NIL
Sandefjord/Torp	ENTO	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Sandnessjøen/Stokka	ENST	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Sogndal/Haukåsen	ENSG	MON - FRI: 0800 - 1500 (0700 - 1400) EXC holidays, SAT - SUN: NIL
Stavanger/Sola	ENZV	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Stokmarknes/Skagen	ENSK	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Stord/Sørstokken	ENSO	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Svalbard/Longyear	ENSB	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Svolvær/Helle	ENSH	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL

Sørkjosen	ENSR	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Tromsø/Langnes	ENTC	MON - FRI: 0800 - 1430 (0700 - 1530) EXC holidays, SAT - SUN: NIL
Trondheim/Værnes	ENVA	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Vadsø	ENVD	MON - FRI: 0700 - 1400 (0600 - 1300) EXC holidays, SAT - SUN: NIL
Vardø/Svartnes	ENSS	MON - FRI: 0700 - 1430 (0600 - 1330) EXC holidays, SAT - SUN: NIL
Ørland	ENOL	MON - FRI: CIV: 0700 - 1400 (0600 - 1300), SAT - SUN: NIL
Ørsta-Volda/Hovden	ENOV	MON - FRI: 0730 - 1430 (0630 - 1330) EXC holidays, SAT - SUN: NIL
Ålesund/Vigra	ENAL	MON - FRI: 0700 - 1530 (0600 - 1430) EXC holidays, SAT - SUN: NIL

#### AD 2.3 Operational hours: Customs and immigration

AIRPORT	ICAO	HR
Alta	ENAT	NIL
Andøya/Andenes	ENAN	NIL
Arendal/Gullknapp	ENGK	NIL
Bardufoss	ENDU	NIL
Bergen/Flesland	ENBR	Customs: 0700 - 2300 (0600 - 2200). Border control: all international scheduled flights H24. Non-scheduled international flights 0600 - 2300 (0500 - 2200), otherwise call 02800.
Berlevåg	ENBV	NIL
Bodø	ENBO	AVBL O/R to ATS 90 MIN prior to ETA
Brønnøysund/Brønnøy	ENBN	NIL
Båtsfjord	ENBS	NIL
Florø	ENFL	NIL
Førde/Bringeland	ENBL	NIL

Hammerfest	ENHF	NIL
Harstad/Narvik/Evenes	ENEV	AVBL O/R to operator/handling agent 4 HR prior to ETA
Hasvik	ENHK	NIL
Haugesund/Karmøy	ENHD	AVBL through mandatory handling, REF <a href="https://flyhau.no/en/tariff-regulations">https://flyhau.no/en/tariff-regulations</a>
Honningsvåg/Valan	ENHV	NIL
Hønefoss/Eggemoen	ENEG	AVBL O/R AD ADMIN
Kirkenes/Høybuktnoen	ENKR	AVBL O/R to ATS 1 HR prior to ETA
Kjeller	ENKJ	NIL
Kristiansand/Kjevik	ENCN	AVBL O/R to ATS 1 HR prior to ETA
Kristiansund/Kvernberget	ENKB	AVBL O/R to ATS 4 HR prior to ETA
Lakselv/Banak	ENNA	O/R AD ADMIN or Customs HQ (+47) 22 86 03 12. ATS shall be notified of INTL ARR not later than 48 HR prior to ETA.
Leknes	ENLK	NIL
Mehamn	ENMH	NIL
Mo I Rana/Røssvoll	ENRA	NIL
Molde/Årø	ENML	AVBL O/R to ATS 3 HR prior to ETA
Mosjøen/Kjærstad	ENMS	NIL
Namsos	ENNM	NIL
Notodden	ENNO	O/R to ATS 24 HR prior to ETA for INTL flights approved by Norwegian CAA.
Ny Ålesund/ Hamnerabben	ENAS	Not required
Oslo/Gardermoen	ENGM	H24
Rena	ENRE	NIL

Rygge	ENRY	REF AD 2.20
Røros	ENRO	MON - FRI: AVBL 0700 - 1430 (0600 - 1330) O/R to ATS 3 HR prior to ETA, SAT - SUN: NIL
Rørvik/Ryum	ENRM	NIL
Røst	ENRS	NIL
Sandane/Anda	ENSD	NIL
Sandefjord/Torp	ENTO	AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice via operator/handling agent, or to customs (+47) 458 71 040 for flights not subject to mandatory handling.
Sandnessjøen/Stokka	ENST	NIL
Sogndal/Haukåsen	ENSG	NIL
Stavanger/Sola	ENZV	H24
Stokmarknes/Skagen	ENSK	NIL
Stord/Sørstokken	ENSO	NIL
Svalbard/Longyear	ENSB	All TFC to, from and within Svalbard are subject to PPR, REF ENSB AD 2.20
Svolvær/Helle	ENSH	NIL
Sørkjosen	ENSR	NIL
Tromsø/Langnes	ENTC	O/R 90 MIN prior notice via operator / handling agent
Trondheim/Værnes	ENVA	AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice (+47) 67 03 28 00
Vadsø	ENVD	NIL
Vardø/Svartnes	ENSS	NIL
Ørland	ENOL	NIL
Ørsta-Volda/Hovden	ENOV	NIL
Ålesund/Vigra	ENAL	AVBL O/R to ATS 2 HR prior to ETA

## AD 2.3 Operational hours: MET Office

AIRPORT	ICAO	HR
Alta	ENAT	NIL
Andøya/Andenes	ENAN	NIL
Arendal/Gullknapp	ENGK	NIL
Bardufoss	ENDU	H24
		RMK: Bardufoss MET (+47) 67 03 44 85
Bergen/Flesland	ENBR	NIL
Berlevåg	ENBV	NIL
Bodø	ENBO	NIL
Brønnøysund/Brønnøy	ENBN	NIL
Båtsfjord	ENBS	NIL
Florø	ENFL	NIL
Førde/Bringeland	ENBL	NIL
Hammerfest	ENHF	NIL
Harstad/Narvik/Evenes	ENEV	H24
Hasvik	ENHK	NIL
Haugesund/Karmøy	ENHD	NIL
Honningsvåg/Valan	ENHV	NIL
Hønefoss/Eggemoen	ENEG	NIL
Kirkenes/Høybuktnoen	ENKR	NIL

Kjeller	ENKJ	NIL
Kristiansand/Kjevik	ENCN	NIL
Kristiansund/Kvernberget	ENKB	NIL
Lakselv/Banak	ENNA	NIL
Leknes	ENLK	NIL
Mehamn	ENMH	NIL
Mo I Rana/Røssvoll	ENRA	NIL
Molde/Årø	ENML	NIL
Mosjøen/Kjærstad	ENMS	NIL
Namsos	ENNM	NIL
Notodden	ENNO	NIL
Ny Ålesund/ Hamnerabben	ENAS	NIL
Oslo/Gardermoen	ENGM	NIL
Rena	ENRE	NIL
Rygge	ENRY	NIL
Røros	ENRO	NIL
Rørvik/Ryum	ENRM	NIL
Røst	ENRS	NIL
Sandane/Anda	ENSD	NIL
Sandefjord/Torp	ENTO	NIL
Sandnessjøen/Stokka	ENST	NIL

Sogndal/Haukåsen	ENSG	NIL
Stavanger/Sola	ENZV	NIL
Stokmarknes/Skagen	ENSK	NIL
Stord/Sørstokken	ENSO	NIL
Svalbard/Longyear	ENSB	MON - FRI: 0730 - 1400 (0630 - 1300) EXC holiday, SAT - SUN: N/A
Svolvær/Helle	ENSH	NIL
Sørkjosen	ENSR	NIL
Tromsø/Langnes	ENTC	NIL
Trondheim/Værnes	ENVA	NIL
Vadsø	ENVD	NIL
Vardø/Svartnes	ENSS	NIL
Ørland	ENOL	H24
Ørsta-Volda/Hovden	ENOV	NIL
Ålesund/Vigra	ENAL	NIL

#### AD 2.3 Operational hours: ATS

AIRPORT	ICAO	HR
Alta	ENAT	MON - FRI: 0415 - 2305 (0315 - 2205), SAT: 0900 - 1900 (0800 - 1800), SUN: 0600 - 0700 (0500 - 0600) / 0900 - 2305 (0800 - 2205)
		RMK: NIL
Andøya/Andenes	ENAN	MON - FRI: 0420 - 2100 (0320 - 2000), SAT: 0750 - 0830 (0650 - 0730), SUN: 1015 - 2100 (0915 - 2000)
		RMK: Public HOL excluded
Arendal/Gullknapp	ENGK	No ATS provided

		RMK: NIL
Bardufoss	ENDU	MON - FRI: 0520 - 2200 (0420 - 2100), SAT: 0800 - 1710 (0700 - 1610), SUN: 0850 - 2230 (0750 - 2130)
		RMK: NIL
Bergen/Flesland	ENBR	H24
		RMK: NIL
Berlevåg	ENBV	MON - FRI: 0600 - 2030 (0500 - 1930), SAT: NIL, SUN: 1200 - 2030 (1100 - 1930)
		RMK: HOSP/SAR outside HR OF OPS AVBL O/R 40 MIN prior notice via Polaris ACC Bodø
Bodø	ENBO	H24
		RMK: NIL
Brønnøysund/Brønnøy	ENBN	MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0915 - 1515 (0815 - 1415), SUN: 1200 - 2200 (1100 - 2100)
		RMK: NIL
Båtsfjord	ENBS	MON - FRI: 0600 - 2015 (0500 - 1915), SAT: NIL, SUN: 1115 - 2015 (1015 - 1915)
		RMK: HOSP/SAR outside HR OF OPS AVBL O/R 40 MIN prior notice via Polaris ACC Bodø
Florø	ENFL	MON - FRI: 0400 - 2130 (0300 - 2030), SAT: 1200 - 1215 (1100 - 1115) / 1530 - 1700 (1430 - 1600), SUN: 1200 - 1215 (1100 - 1115) / 1630 - 2130 (1530 - 2030)
		RMK: NIL
Førde/Bringeland	ENBL	MON - FRI: 0450 - 2230 (0350 - 2130), SAT: 0730 - 0830 (0630 - 0730) / 1130 - 1530 (1030 - 1430), SUN: 0730 - 0830 (0630 - 0730) / 1130 - 2230 (1030 - 2130)
		RMK: NIL
Hammerfest	ENHF	MON - FRI: 0505 - 2310 (0405 - 2210), SAT: 1150 - 1400 (1050 - 1300), SUN: 0935 - 2310 (0835 - 2210)
		RMK: HOSP/SAR OUTSIDE HR OF OPS AVBL O/R VIA POLARIS ACC TEL (+47) 75 58 29 57
Harstad/Narvik/Evenes	ENEV	H24
		RMK: NIL

Hasvik	ENHK	MON - FRI: 0630 - 2000 (0530 - 1900), SAT: NIL, SUN: 1330 - 1530 (1230 - 1430) / 1830 - 2000 (1730 - 1900)	
		RMK:	Extended HR of OPS AVBL for HOSP/SAR O/R via Polaris ACC Bodø
Haugesund/Karmøy	ENHD	MON - FRI: 0520 - 2100 (0420 - 2000), SAT: 0600 - 2100 (0500 - 2000), SUN: 0700 - 2230 (0600 - 2130)	
		RMK:	NIL
Honningsvåg/Valan	ENHV	MON - FRI: 0435 - 2205 (0335 - 2105), SAT: CLSD, SUN: 1130 - 13:30 (1030 - 1230) / 2030 - 2205 (1930 - 2105)	
		RMK:	NIL
Hønefoss/Eggemoen	ENEG	No ATS service provided	
		RMK:	NIL
Kirkenes/Høybuktmoen	ENKR	MON - FRI: 0330 - 2315 (0230 - 2215), SAT: 0830 - 1810 (0730 - 1710), SUN: 0900 - 2315 (0800 - 2215)	
		RMK:	NIL
Kjeller	ENKJ	No ATS service provided	
		RMK:	AD AVBL for VFR 0700 - 2100 (0600 - 2000). PPR for all TFC.
Kristiansand/Kjevik	ENCN	MON - FRI: 0510 - 2215 (0410 - 2115), SAT: 0510 - 2110 (0410 - 2010), SUN: 0510 - 2215 (0410 - 2115)	
		RMK:	NIL
Kristiansund/Kvernberget	ENKB	MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0900 - 1600 (0800 - 1500), SUN: 1100 - 2200 (1000 - 2100)	
		RMK:	NIL
Lakselv/Banak	ENNA	MON - FRI: 0520 - 2250 (0420 - 2150), SAT: 1100 - 1530 (1000 - 1430), SUN: 1040 - 2250 (0940 - 2150)	
		RMK:	AVBL O/R H24 for charterflights
Leknes	ENLK	MON - FRI: 0535 - 2255 (0435 - 2155), SAT: 0750 - 1610 (0650 - 1510), SUN: 1000 - 1750 (0900 - 1650) / 1920 - 2255 (1820 - 2155)	
		RMK:	NIL
Mehamn	ENMH	MON - FRI: 0405 - 1220 (0305 - 1120) / 1610 - 2320 (1510 - 2220), SAT: NIL, SUN: 1705 - 2320 (1605 - 2220)	

		RMK: NIL
Mo I Rana/Røssvoll	ENRA	MON - FRI: 0500 - 2210 (0400 - 2110), SAT: 0800 - 1500 (0700 - 1400), SUN: 1225 - 2210 (1125 - 2110)
		RMK: NIL
Molde/Årø	ENML	MON - FRI: 0505 - 2100 (0405 - 2000), SAT: 0600 - 1500 (0500 - 1400), SUN: 0930 - 2250 (0830 - 2150)
		RMK: HOSP/SAR outside HR of OPS AVBL O/R 40 MIN prior notice via Polaris ACC
Mosjøen/Kjærstad	ENMS	MON - FRI: 0350 - 2050 (0250 - 1950), SAT: 0820 - 1450 (0720 - 1350), SUN: 1020 - 2050 (0920 - 1950)
		RMK: NIL
Namsos	ENNM	MON - FRI: 0520 - 2155 (0420 - 2055), SAT: CLOSED, SUN: 0930-1050 (0830 - 0950) / 1400-2155 (1300 - 2055)
		RMK: NIL
Notodden	ENNO	MON - FRI: 0800 - 1500 (0700 - 1400), SAT: CLOSED, SUN: CLOSED
		RMK: Public HOL excluded
Ny Ålesund/ Hamnerabben	ENAS	No detailed HR of OPS, AFIS AVBL in accordance with PPR.
		RMK: Contact Kings Bay Ltd. or Longyear AFIS
Oslo/Gardermoen	ENGM	H24
		RMK: NIL
Rena	ENRE	O/R
		RMK: NIL
Rygge	ENRY	WEEK 33 - 18, MON: 0700 - 1900 (0600 - 1800), TUE - THU: 0700 - 2300 (0600 - 2200), FRI: 0700 - 1900 (0600 - 1800), SAT: 0800 - 1500 (0700 - 1400), SUN: NIL, WEEK 19 - 32, MON - FRI: 0700 - 1900 (0600 - 1800), SAT - SUN: 0900 - 1300 (0800 - 1200)
		RMK: Outside HR of OPS, O/R to WingOps
Røros	ENRO	MON - FRI: 0530 - 1515 (0430 - 1415) / 1740 - 1810 (1640 - 1710), SAT: CLOSED, SUN: 1100 - 1820 (1000 - 1720)
		RMK: NIL

Rørvik/Ryum	ENRM	MON - FRI: 0505 - 1325 (0405 - 1225) / 1340 - 2120 (1240 - 2020), SAT: 0940 - 1015 (0840 - 0915), SUN: 1205 - 2120 (1105 - 2020)	
		RMK:	NIL
Røst	ENRS	MON: 0650 - 0830 (0550 - 0730) / 1830 - 2105 (1730 - 2005), TUE - THU: 0650 - 2105 (0550 - 2005), FRI: 0650 - 0830 (0550 - 0730) / 1830 - 2105 (1730 - 2005), SAT: 0650 - 1000 (0550 - 0900), SUN: 1830 - 2105 (1730 - 2005)	
		RMK:	NIL
Sandane/Anda	ENSD	MON - FRI: 0440 - 2155 (0340 - 2055), SAT: 0640 - 1630 (0540 - 1530), SUN: 1030 - 1145 (0930 - 1045) / 1615 - 2155 (1515 - 2055)	
		RMK:	NIL
Sandefjord/Torp	ENTO	MON - SAT: 0500 - 2200 (0400 - 2100), SUN: 0600 - 2200 (0500 - 2100)	
		RMK:	NIL
Sandnessjøen/Stokka	ENST	MON - FRI: 0500 - 2215 (0400 - 2115), SAT: 0930 - 1300 (0830 - 1200), SUN: 1345 - 2215 (1245 - 2115)	
		RMK:	NIL
Sogndal/Haukåsen	ENSG	MON - FRI: 0515 - 2100 (0415 - 2000), SAT: 0630 - 1130 (0530 - 1030) / 1450 - 1530 (1350 - 1430), SUN: 1300 - 2130 (1200 - 2030)	
		RMK:	OPS HR above are core hours, REF NOTAM for possible adjustments.
Stavanger/Sola	ENZV	H24	
		RMK:	NIL
Stokmarknes/Skagen	ENSK	MON - WED: 0515 - 2015 (0415 - 1915), THU - FRI: 0450 - 2015 (0350 - 1915), SAT: 1000 - 1500 (0900 - 1400), SUN: 1000 - 2015 (0900 - 1915)	
		RMK:	NIL
Stord/Sørstokken	ENSO	MON - FRI: 0500 - 1835 (0400 - 1735), SAT: CLOSED, SUN: 1045 - 1915 (0945 - 1815)	
		RMK:	Outside opening HR HOSP/SAR OR. Extend HR of OPS OR TEL (+47) 53 40 37 13.
Svalbard/Longyear	ENSB	H24	
		RMK:	NIL
		MON - FRI: 0535 - 2010 (0435 - 1910), SAT: 0955 - 1750 (0855 - 1650), SUN: 0955 - 2010 (0855 - 1910)	

Svolvær/Helle	ENSH	RMK: NIL	
		MON - FRI: 0445 - 1945 (0345 - 1845), SAT: NIL, SUN: 1115 - 1315 (1015 - 1215) / 1645 - 1945 (1545 - 1845)	
Sørkjosen	ENSR	RMK: NIL	
		H24	
Tromsø/Langnes	ENTC	RMK: NIL	
		H24	
Trondheim/Værnes	ENVA	RMK: NIL	
		MON - FRI: 0330 - 2325 (0230 - 2225), SAT: 0945 - 1735 (0845 - 1635), SUN: 1230 - 1430 (1130 - 1330) / 1600 - 2325 (1500 - 2225)	
Vadsø	ENVD	RMK: NIL	
		MON - FRI: 0700 - 1845 (0600 - 1745), SAT: NIL, SUN: 1045 - 1300 (0945 - 1200) / 1700 - 1845 (1600 - 1745)	
Vardø/Svartnes	ENSS	RMK: NIL	
		TWR: H24, APP: MON - FRI: 0800 - 1430 (0700 - 1330), SAT - SUN: NIL	
Ørland	ENOL	RMK: Outside detailed APP HR, APP service provided by TWR	
		MON - FRI: 0445 - 2230 (0345 - 2130), SAT: 0645 - 1700 (0545 - 1600), SUN: 0915 - 1715 (0815 - 1615) / 1845 - 2230 (1745 - 2130)	
Ørsta-Volda/Hovden	ENOV	RMK: HOSP/SAR outside HR of OPS AVBL O/R VIA Polaris ACC Bodø	
		MON - SUN: 0500 - 2230 (0400 - 2130)	
Ålesund/Vigra	ENAL	RMK: NIL	

#### AD 2.3 Operational hours: Fuel

AIRPORT	ICAO	HR
Alta	ENAT	MON - FRI: 0500 - 1445 (0400 - 1345) / 1950 - 2100 (1850 - 2000), SAT: 1000 - 1600 (0900 - 1500), SUN: 0900 - 1300 (0800 - 1200) / 1950 - 2100 (1850 - 2000)

		RMK:	Within HR of SER: Air BP (+47) 917 22 590, Outside HR of SER: Air BP OOHS (+971) 5045 30326 / airbpoutofhours@bp.com
Andøya/Andenes	ENAN	MON - FRI: 0630 - 1430 (0530 - 1330), SAT - SUN: NIL	
		RMK:	For public HOL contact FLO fuel (+47) 458 71 621 / bjojorgensen@mil.no.
Arendal/Gullknapp	ENGK	NIL	
		RMK:	For fuel call (+47 911 69 727)
Bardufoss	ENDU	MON - FRI: 0430 - 1730 (0330 - 1630), SAT: 0800 - 1100 (0700 - 1000), SUN: 1100 - 1900 (1000 - 1800)	
		RMK:	Outside these HR contact Air BP (+47) 458 72 157. Surcharge applies.
Bergen/Flesland	ENBR	MON - FRI: 0400 - 2200 (0300 - 2100), SAT: 0400 - 2000 (0300 - 1900), SUN: 0400 - 2230 (0300 - 2130)	
		RMK:	Outside these HR O/R Flytanking AS (+47) 55 92 64 64 / (+47) 414 17 433.
Berlevåg	ENBV	AVBL O/R	
		RMK:	NIL
Bodø	ENBO	JET A1: MON - FRI: 0330 - 2130 (0230 - 2030), SAT: 0530 - 1400 (0430 - 1300), SUN: 0900 - 2130 (0800 - 2030). 100LL: H24. F 34: MON - FRI: 0730 - 1530 (0630 - 1430).	
		RMK:	JET A1: (+47) 75 52 03 79. F 34: (+47) 90 08 84 50. Surcharge applies outside HR of OPS.
Brønnøysund/Brønnøy	ENBN	MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0915 - 1515 (0815 - 1415), SUN: 1200 - 2200 (1100 - 2100)	
		RMK:	Outside these HR O/R (+47) 48 28 13 83
Båtsfjord	ENBS	NIL	
		RMK:	NIL
Florø	ENFL	MON - THU: 0510 - 2030 (0410 - 1930), FRI: 0615 - 2030 (0515 - 1930), SAT: 1225 - 1720 (11:25 - 1620), SUN: 0815 - 0835 (0715 - 0735) / 1235 - 2030 (1135 - 1930)	
		RMK:	NIL
Førde/Bringeland	ENBL	MON - FRI: 0450 - 2245 (0350 - 2145), SAT: 1100 - 1450 (1000 - 1350), SUN: 0950 - 1830 (0850 - 1730) / 2120 - 2250 (2020 - 2150)	

		RMK:	For GA O/R via ATS
Hammerfest	ENHF	MON - FRI: 0505 - 2310 (0405 - 2210), SAT: 1150 - 1400 (1050 - 1300), SUN: 0935 - 2310 (0835 - 2210)	
		RMK:	AVBL on 40 MIN REQ via Polaris ACC
Harstad/Narvik/Evenes	ENEV	MON - FRI: 0430 - 1930 (0330 - 1830), SAT: 0430 - 1330 (0330 - 1230), SUN: 0830 - 1930 (0730 - 1830)	
		RMK:	Within HR of OPS (+47) 47 78 79 58 / eveaviationfuel@gmail.com
Hasvik	ENHK	NIL	
		RMK:	NIL
Haugesund/Karmøy	ENHD	MON - FRI: 0500 - 1730 (0400 - 1630), SAT: 0530 - 1015 (0430 - 0915), SUN: 0645 - 0730 (0545 - 0630) / 1345 - 1930 (1245 - 1830)	
		RMK:	AVBL OR Andersen Airport Service (+47) 52 84 04 70 / FAX (+47) 53 84 04 22
Honningsvåg/Valan	ENHV	MON - FRI: 0435 - 2205 (0335 - 2105), SAT: CLOSED, SUN: 1130 - 1330 (1030 - 1230) / 2030 - 2205 (1930 - 2105)	
		RMK:	NIL
Hønefoss/Eggemoen	ENEG	MON - FRI: 0600 - 1500 (0500 - 1400), SAT - SUN: NIL	
		RMK:	RMK: EXC holidays
Kirkenes/Høybuktnoen	ENKR	MON - TUE: 0415 - 1800 (0315 - 1700), WED - FRI: 0415 - 2000 (0315 - 1900), SAT: 0800 - 1100 (0700 - 1000) / 1700 - 1800 (1600 - 1700), SUN: 0900 - 1930 (0800 - 1830)	
		RMK:	AVBL O/R Air BP Norway AS (+47) 905 22 091. 30 MIN response time. Not AVBL outside HR of OPS.
Kjeller	ENKJ	NIL	
		RMK:	NIL
Kristiansand/Kjevik	ENCN	MON - FRI: 0430 - 1830 (0330 - 1730), SAT: 0430 - 1700 (0330 - 1600), SUN: 0430 - 1830 (0330 - 1730)	
		RMK:	JET A1: Outside opening HR O/R prior to closing. Tlf (+47) 38063416/ (+47) 22 54 00 50. AVGAS 100LL: Tlf: (+47) 38 06 34 16/ (+47) 33 45 24 22. Opening HR same as Jet A1.
Kristiansund/Kvernberget	ENKB	MON - FRI: 0545 - 1800 (0445 - 1700), SAT: 0600 - 0900 (0500 - 0800) / 1400 - 1700 (1300 - 1600), SUN: 1130 - 1600 (1030 - 1500)	
		RMK:	Within HR of OPS Shell (+47) 90 76 68 49.

Lakselv/Banak	ENNA	MON - FRI: 0500 - 2315 (0400 - 2215), SAT: 0830 - 1300 (0730 - 1200), SUN: 1200 - 2315 (1100 - 2215)
		RMK: Outside HR of OPS O/R AFSN (+47) 482 89 103 or Air BP +971 50 453 6032.
Leknes	ENLK	AVBL O/R
		RMK: NIL
Mehamn	ENMH	MON - FRI: 0405 - 1220 (0305 - 1120) / 1610 - 2320 (1510 - 2220), SAT: NIL, SUN: 1705 - 2320 (1605 - 2220)
		RMK: NIL
Mo I Rana/Røssvoll	ENRA	MON - FRI: 0500 - 2210 (0400 - 2110), SAT: 0800 - 1500 (0700 - 1400), SUN: 1225 - 2210 (1125 - 2110)
		RMK: NIL
Molde/Årø	ENML	MON - THU: 0430 - 1630 (0330 - 1530), FRI: 0430 - 1730 (0330 - 1630), SAT: 0600 - 1430 (0500 - 1330), SUN: 1030 - 1630 (0930 - 1530)
		RMK: Outside opening HR O/R via Molde Fuel Service (+47) 46 51 53 41
Mosjøen/Kjærstad	ENMS	MON - FRI: 0350 - 2050 (0250 - 1950), SAT: 0820 - 1450 (0720 - 1350), SUN: 1020 - 2050 (0920 - 1950)
		RMK: NIL
Namsos	ENNM	MON - FRI: 0500 - 2155 (0400 - 2055), SAT: CLOSED, SUN: 0830-1600 (0730 - 1500) / 2030 - 2200 (1930 - 2100)
		RMK: Outside HR of SER: Air BP (+44) 20 3401 7247 / airbp247@bp.com
Notodden	ENNO	AVBL H24
		RMK: REF ENNO AD 2.20
Ny Ålesund/ Hamnerabben	ENAS	No detailed OPS HR, AVBL O/R by prior permission
		RMK: NIL
Oslo/Gardermoen	ENGM	JET A1: H24, F34: H24, 100LL: MON - FRI: AVBL O/R 0500 - 2300 (0400 - 2200), SAT: 0800 - 1700 (0700 - 1600), SUN: 1000 - 1900 (0900 - 1800)
		100LL: Within HR of OPS 1 HR prior notice to Sundt Air Handling (+47) 64 82 02 00 required Outside HR of OPS: (+47) 906 25 500.

		RMK: JET A1: H24: Gardermoen Fuelling Services AS, (+47) +64 81 08 10 / dispatch@gfs.no 0430 - 2230 (0330 - 2130): Skytanking, (+47) 64 82 14 30 / dispatch.osl@skytanking.com F34: MIL OPS (+47) 64 80 33 35 / 124.435 MHZ.
Rena	ENRE	NIL
		RMK: NIL
Rygge	ENRY	MON - FRI: 0700 - 1500 (0600 - 1400) EXC holidays, SAT - SUN: NIL
		RMK: Outside HR of OPS, O/R to WingOps
Røros	ENRO	MON - FRI: 0530 - 1515 (0430 - 1415) / 1740 - 1810 (1640 - 1710), SAT: CLOSED, SUN: 1100 - 1820 (1000 - 1720)
		RMK: Within HR of OPS Avinor (+47) 911 97 919
Rørvik/Ryum	ENRM	MON - FRI: 0505 - 1325 (0405 - 1225) / 1340 - 2120 (1240 - 2020), SAT: 0940 - 1015 (0840 - 0915), SUN: 1205 - 2120 (1105 - 2020)
		RMK: NIL
Røst	ENRS	H24
		RMK: Self service outside of scheduled traffic. Air BP sales out of hours (24H salg og ITR) +44 203 401 7247 / airbp247@bp.com
Sandane/Anda	ENSD	MON - FRI: 0440 - 2155 (0340 - 2055), SAT: 0640 - 1630 (0540 - 1530), SUN: 1030 - 1145 (0930 - 1045) / 1615 - 2155 (1515 - 2055)
		RMK: NIL
Sandefjord/Torp	ENTO	Fuel truck AVBL from first SCHED DEP until last SCHED DEP
		RMK: Within HR of OPS: Fuel coordinator (+47) 33 48 63 44. Outside HR of OPS: Fuel coordinator (+47) 905 71 097 / (+47) 907 32 943 / post@torpflytank.com.
Sandnessjøen/Stokka	ENST	MON - FRI: 0500 - 2215 (0400 - 2115), SAT: 0930 - 1300 (0830 - 1200), SUN: 1345 - 2215 (1245 - 2115)
		RMK: NIL
Sogndal/Haukåsen	ENSG	MON - FRI: 0515 - 2100 (0415 - 2000), SAT: 0515 - 0915 (0415 - 0815), SUN: 1600 - 2100 (1500 - 2000)
		RMK: OPS HR above are core hours, REF NOTAM for possible adjustments. For GA O/R via ATS
Stavanger/Sola	ENZV	MON - FRI: 0400 - 2100 (0300 - 2000), SAT: 0400 - 1800 (0300 - 1700), SUN: 0400 - 2100 (0300 - 2000)

		RMK:	Within HR of OPS (+47) 51 64 79 99 / (+47) 905 66 519. Outside HR of OPS: (+47) 905 66 520.
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Stord/Sørstokken	ENSO	MON - FRI: 0500 - 1835 (0400 - 1735), SAT: CLOSED, SUN: 1045 - 1915 (0945 - 1815)	
		RMK:	Outside HR of OPS TEL (+47) 913 44 862.
Svalbard/Longyear	ENSB	MON - FRI: 0830 - 1645 (0730 - 1545), SAT - SUN: 0830 - 1415 (0730 - 1315)	
		RMK:	Excluding 24 and 25 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at <a href="mailto:acn@airportcoordination.com">acn@airportcoordination.com</a>
Svolvær/Helle	ENSH	MON - TUE: 0400 - 2250 (0300 - 2150), WED - FRI: 0535 - 2250 (0435 - 2150), SAT: 0930 - 1250 (0830 - 1150), SUN: 1145 - 2250 (1045 - 2150)	
		RMK:	NIL
Sørkjosen	ENSR	MON - FRI: 0445 - 1945 (0345 - 1845), SAT: NIL, SUN: 1115 - 1315 (1015 - 1215) / 1645 - 1945 (1545 - 1845)	
		RMK:	NIL
Tromsø/Langnes	ENTC	MON - FRI: 0400 - 2200 (0300 - 2100), SAT: 0400 - 2000 (0300 - 1900), SUN: 0500 - 2200 (0400 - 2100)	
		RMK:	Outside HR of OPS Flytanking AS (+47) 992 41 531. Surcharge applies outside HR of OPS.
Trondheim/Værnes	ENVA	MON - FRI: 0430 - 2100 (0330 - 2000), SAT: 0430 - 1800 (0330 - 1700), SUN: 0430 - 2100 (0330 - 2000)	
		RMK:	JET A1 outside HR of OPS, Fuel coordinator TEL (+47) 74 83 46 40/ (+47) 911 76 530. Surcharge applies outside HR of OPS. 100LL H24 Self Service. Outside HR of OPS Flytanking AS (+47) 992 41 531.
Vadsø	ENVD	MON - FRI: 0330 - 2325 (0230 - 2225), SAT: 0945 - 1730 (0845 - 1630), SUN: 1230 - 1415 (1130 - 1315) / 1630 - 2325 (1530 - 2225)	
		RMK:	NIL
Vardø/Svartnes	ENSS	MON - FRI: 0700 - 1845 (0600 - 1745), SAT: NIL, SUN: 1045 - 1300 (0945 - 1200) / 1700 - 1845 (1600 - 1745)	
		RMK:	NIL
Ørland	ENOL	MON - FRI: 0630 - 1500 (0530 - 1400) EXC holidays, SAT - SUN: NIL	

		RMK:	Outside HR of OPS, O/R (+47) 72 51 24 83 / (+47) 458 74 833. For CIV, payment by Air BP card only.
Ørsta-Volda/Hovden	ENOV		MON - FRI: 0445 - 2230 (0345 - 2130), SAT: 0645 - 1700 (0545 - 1600), SUN: 0915 - 1715 (0815 - 1615) / 1845 - 2230 (1745 - 2130)
		RMK:	HOSP/SAR outside HR of OPS AVBL O/R VIA Polaris ACC Bodø. AVGAS 100 LL AVBL after coordination with aero club, REF AD 2.20.
Ålesund/Vigra	ENAL		MON - SAT: 0400 - 2230 (0300 - 2130), SUN: 0400 - 2300 (0300 - 2200)
		RMK:	Outside opening HR O/R prior to closing.

### AD 2.3 Operational hours: Handling

AIRPORT	ICAO	HR	
Alta	ENAT		MON - FRI: 0415 - 2200 (0315 - 2100), SAT: 1230 - 1830 (1130 - 1730), SUN: 0430 - 2215 (0330 - 2115)
		RMK:	Widerøe Ground Handling (+47) 417 06 995
Andøya/Andenes	ENAN		MON - SUN: 0400 - 1115 (0300 - 1015) / 1315 - 1900 (1215 - 1800), MIL: No detailed OPS HR, AVBL O/R
		RMK:	CIV TFC: Widerøe Ground Handling (+47) 98 90 15 73/ andenes@wideroe.no, MIL TFC: FLO Forsyning Transport (Air Movement & Transportation) (+47) 77 89 66 00 / 77 89 66 40 / cargo.trans.flo@u.mil.no
Arendal/Gullknapp	ENGK		NIL
		RMK:	NIL
Bardufoss	ENDU		MON - FRI: 0730 - 1530 (0630 - 1430), SAT - SUN: O/R
		RMK:	CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu / MIL TFC FLO Forsyning Transport (Air Movement & Transportation) (+47) 77 89 66 00 / 77 89 66 40 / cargo.trans.flo@u.mil.no
Bergen/Flesland	ENBR		AVBL during HO
		RMK:	Aviator (+47) 982 98 400, GA Partner (+47) 938 15 000 / ops@gapa.no, Widerøe Ground Handling (+47) 64 82 65 02
Berlevåg	ENBV		MON - FRI: 0600 - 2030 (0500 - 1930), SAT: NIL, SUN: 1100 - 1400 (1000 - 1300) / 1800 - 2030 (1700 - 1930)
		RMK:	NIL
			AVBL during HO

Bodø	ENBO	RMK: Widerøe Ground Handling (+47) 417 06 802, Aviator (+47) 948 26 655
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R
		RMK: Widerøe Ground Handling (+47) 41 70 63 40
Båtsfjord	ENBS	MON - FRI: 0530 - 2030 (0430 - 1930), SAT: NIL, SUN: 1030 - 1330 (0930 - 1230) / 1730 - 2030 (1630 - 1930)
		RMK: Widerøe Ground Handling (+47) 948 85 740 / batsfjord@wideroe.no
Florø	ENFL	No detailed OPS HR, AVBL O/R
		RMK: Widerøe Ground Handling (+47) 41 70 69 30
Førde/Bringeland	ENBL	No detailed OPS HR, AVBL O/R
		RMK: Contact (+47) 41 70 62 80
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R
		RMK: Widerøe (+47) 67 03 50 89
Harstad/Narvik/Evenes	ENEV	AVBL for scheduled flights. Otherwise O/R
		RMK: WGH (+47) 41 70 68 50 / handling.eve@wideroe.no
Hasvik	ENHK	Available for scheduled flights
		RMK: NIL
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R
		RMK: Mandatory handling all international flights, REF <a href="https://flyhau.no/en/tariff-regulations">https://flyhau.no/en/tariff-regulations</a> / Aviator (+47) 400 02 444 / operations.hau@aviator.eu / (+47) 982 98 398 (Duty Manager), Widerøe Ground Handling (+47) 417 06 577 / handling.hau@wideroe.no
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R
		RMK: NIL
Hønefoss/Eggemoen	ENEG	No detailed OPS HR, AVBL O/R

		RMK:	NIL
Kirkenes/Høybuktnoen	ENKR	AVBL within ATS OPS HR	
		RMK:	Widerøe Ground Handling handling.kkn@wideroe.no
Kjeller	ENKJ	NIL	
		RMK:	NIL
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R	
		RMK:	Widerøe Ground Handling
Kristiansund/Kvernberget	ENKB	NIL	
		RMK:	No detailed OPR HR, AVBL O/R Widerøe Ground Handling TEL +47 417 06 255 / handling.ksu@wideroe.no
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R	
		RMK:	Widerøe Ground Handling (+47) 989 01 364, OPS HR AVBL O/R to FLO Forsyning Transport / Air Movement & Transportation / Cargo.trans.flo@u.mil.no / (+47) 77 89 66 00 / (+47) 77 89 66 40
Leknes	ENLK	O/R	
		RMK:	Widerøe Ground Handling (+47) 417 06 802
Mehamn	ENMH	NIL	
		RMK:	NIL
Mo I Rana/Røssvoll	ENRA	NIL	
		RMK:	NIL
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R	
		RMK:	Widerøe Ground Handling (+47) 417 06 671 / handling.mol@wideroe.no, Aviator (+47) 976 65 268 / Operations.MOL@aviator.eu
Mosjøen/Kjærstad	ENMS	NIL	
		RMK:	NIL

Namsos	ENNM	O/R	
		RMK:	NIL
Notodden	ENNO	NIL	
		RMK:	REF ENNO AD 2.20
Ny Ålesund/ Hamnerabben	ENAS	NIL	
		RMK:	NIL
Oslo/Gardermoen	ENGM	H24	
		RMK:	NIL
Rena	ENRE	NIL	
		RMK:	NIL
Rygge	ENRY	AVBL	
		RMK:	NIL
Røros	ENRO	No detailed OPS HR, AVBL O/R	
		RMK:	AD ADMIN, Røros Flyservice (+47) 72 41 39 00 rrs@rfly.no
Rørvik/Ryum	ENRM	AVBL by prior arrangement	
		RMK:	NIL
Røst	ENRS	NIL	
		RMK:	NIL
Sandane/Anda	ENSD	MON - FRI: 0400 - 1200 (0300 - 1100) / 1530 - 2200 (1430 - 2100), SAT: 0600 - 1700 (0500 - 1600), SUN: 0930 - 1200 (0830 - 1100) / 1530 - 2200 (1430 - 2100)	
		RMK:	NIL
		No detailed OPS HR, AVBL	

Sandefjord/Torp	ENTO		
		RMK:	REF ENTO AD 2.20
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R	
		RMK:	AD ADMIN
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R	
		RMK:	(+47) 41 70 62 90
Stavanger/Sola	ENZV	H24	
		RMK:	Widerøe Ground Handling (+47) 64 82 65 02, Aviator Stavanger (+47) 454 89 980 / <a href="mailto:operations.svg@aviator.eu">operations.svg@aviator.eu</a> , SundtAir (+47) 400 41 010 / <a href="mailto:svg.handling@sundtair.com">svg.handling@sundtair.com</a>
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Stord/Sørstokken	ENSO	MON - FRI: 0600 - 1835 (0500 - 1735), SAT: CLOSED, SUN: 1145 - 1915 (1045 - 1815)	
		RMK:	Handling TEL (+47) 53 40 37 00.
Svalbard/Longyear	ENSB	MON - FRI: 0830 - 1645 (0730 - 1545), SAT - SUN: 0830 - 1415 (0730 - 1315)	
		RMK:	Excluding 24 and 25 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at <a href="mailto:acn@airportcoordination.com">acn@airportcoordination.com</a>
Svolvær/Helle	ENSH	MON - WED: 0330 - 2135 (0230 - 2035), THU - FRI: 0415 - 2135 (0315 - 2035), SAT: 0730 - 1250 (0630 - 1150), SUN: 1130 - 1330 (1030 - 1230) / 1530 - 2135 (1430 - 2035)	
		RMK:	NIL
Sørkjosen	ENSR	MON - FRI: No detailed OPS HR, AVBL O/R, SAT: NIL, SUN: O/R	
		RMK:	NIL
Tromsø/Langnes	ENTC	AVBL for scheduled flights. Otherwise O/R	
		RMK:	WGH (+47) 64 82 69 04 / <a href="mailto:handling.tos@wideroe.no">handling.tos@wideroe.no</a> , Aviator (+47) 77 28 04 00 / <a href="mailto:operations.tos@aviator.eu">operations.tos@aviator.eu</a>
		AVBL for scheduled flights. Otherwise O/R	

Trondheim/Værnes	ENVA	RMK: Aviator (+47) 74 60 20 10, WGH (+47) 64 82 67 10	
		MON - FRI: 0300 - 1330 (0200 - 1230) / 1500 - 2400 (1400 - 2300), SAT: 1030 - 1530 (0930 - 1430), SUN: 0800 - 1030 (0700 - 0930) / 1500 - 2400 (1400 - 2300)	
Vadsø	ENVD	RMK: NIL	
		MON - FRI: 0730 - 1230 (0630 - 1130) / 1700 - 2130 (1600 - 2030), SAT: NIL, SUN: 1700 - 2130 (1600 - 2030)	
Vardø/Svartnes	ENSS	RMK: NIL	
		NIL	
Ørland	ENOL	RMK: NIL	
		MON - FRI: 0445 - 2230 (0345 - 2130), SAT: 0645 - 1700 (0545 - 1600), SUN: 0915 - 1715 (0815 - 1615) / 1845 - 2230 (1745 - 2130)	
Ørsta-Volda/Hovden	ENOV	RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no	
		No detailed OPS HR, AVBL	
Ålesund/Vigra	ENAL	RMK: Widerøe Ground Handling (+47) 417 06 200 / handling.aes@wideroe.no, Aviator (+47) 70 30 25 60 / (+47) 922 00 472 / operations.aes@aviator.eu	

### AD 2.3 Operational hours: Security

AIRPORT	ICAO	HR	
Alta	ENAT	MON - FRI: 0415 - 2200 (0315 - 2100), SAT: 1230 - 1830 (1130 - 1730), SUN: 0430 - 2215 (0330 - 2115)	
		RMK: NIL	
Andøya/Andenes	ENAN	MON - FRI: 0400 - 1900 (0300 - 1800), SAT: 0700 - 1330 (0600 - 1230), SUN: 1130 - 2000 (1030 - 1900)	
		RMK: NIL	
Arendal/Gullknapp	ENGK	NIL	
		RMK: NIL	
No detailed OPS HR, AVBL for OPR SCHED TFC			

Bardufoss	ENDU	RMK:	O/R outside HR of OPR SCHED TFC to CIV AD ADMIN
Bergen/Flesland	ENBR	H24	
		RMK:	Avinor Securitiy (+47) 67 03 15 50
Berlevåg	ENBV	MON - FRI: 0530 - 1400 (0430 - 1300) / 1800 - 2100 (1700 - 2000), SAT: NIL, SUN: 1100 - 1400 (1000 - 1300) / 1800 - 2100 (1700 - 2000)	
		RMK:	NIL
Bodø	ENBO	H24	
		RMK:	Operations Centre (+47) 67 03 37 00
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Båtsfjord	ENBS	MON - FRI: 0530 - 2030 (0430 - 1930), SAT: NIL, SUN: 1030 - 1330 (0930 - 1230) / 1730 - 2030 (1630 - 1930)	
		RMK:	AVARN (+47) 468 98 630
Florø	ENFL	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Førde/Bringeland	ENBL	No detailed OPS HR	
		RMK:	NIL
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R	
		RMK:	Securitas (+47) 67 03 50 88
Harstad/Narvik/Evenes	ENEV	HO, AVBL O/R	
		RMK:	NIL
Hasvik	ENHK	Available for scheduled flights	
		RMK:	NIL

Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Hønefoss/Eggemoen	ENEG	No detailed OPS HR, AVBL by prior arrangement	
		RMK:	NIL
Kirkenes/Høybuktmoen	ENKR	MON - FRI: 0300 - 1400 (0200 - 1300) / 1700 - 2000 (1600 - 1900), SAT: 0830 - 1130 (0730 - 1030), SUN: 0830 - 2200 (0730 - 2100)	
		RMK:	NIL
Kjeller	ENKJ	NIL	
		RMK:	NIL
Kristiansand/Kjevik	ENCN	MON - SUN: 0330 - 2100 (0230 - 2000)	
		RMK:	NIL
Kristiansund/Kvernberget	ENKB	NIL	
		RMK:	NIL
Lakselv/Banak	ENNA	MON, FRI: 0430 - 1700 (0330 - 1600) / 2000 - 2300 (1900 - 2200), TUE - THU: 0430 - 0700 (0330 - 0600) / 1130 - 1700 (1030 - 1600) / 2000 - 2300 (1900 - 2200), SAT: 0800 - 1300 (0700 - 1200), SUN: 1130 - 1700 (1030 - 1600) / 2000 - 2300 (1900 - 2200)	
		RMK:	NIL
Leknes	ENLK	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Mehamn	ENMH	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
		MON - FRI: 0450 - 2210 (0350 - 2110), SAT: 0530 - 1330 (0430 - 1230), SUN: 0900 - 2200 (0800 - 2100)	

Mo I Rana/Røssvoll	ENRA	RMK: NIL	
Molde/Årø	ENML	MON - FRI: 0400 - 2100 (0300 - 2000), SAT: 0500 - 1500 (0400 - 1400), SUN: 0830 - 2230 (0730 - 2130)	
		RMK: NIL	
Mosjøen/Kjærstad	ENMS	NIL	
		RMK: NIL	
Namsos	ENNM	No detailed OPS HR, AVBL O/R	
		RMK: NIL	
Notodden	ENNO	No detailed OPS HR, AVBL O/R	
		RMK: NIL	
Ny Ålesund/ Hamnerabben	ENAS	NIL	
		RMK: NIL	
Oslo/Gardermoen	ENGM	H24	
		RMK: NIL	
Rena	ENRE	NIL	
		RMK: NIL	
Rygge	ENRY	NIL	
		RMK: NIL	
Røros	ENRO	No detailed OPS HR, AVBL O/R	
		RMK: AD ADMIN	
Rørvik/Ryum	ENRM	No detailed OPS HR, AVBL by prior arrangement	
		RMK: NIL	

Røst	ENRS	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Sandefjord/Torp	ENTO	NIL	
		RMK:	NIL
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Stavanger/Sola	ENZV	H24	
		RMK:	Avinor Security (+47) 952 59 381
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Stord/Sørstokken	ENSO	MON - FRI: 0600 - 1835 (0500 - 1735), SAT: CLOSED, SUN: 1145 - 1915 (1045 - 1815)	
		RMK:	Extend HR of OPS O/R TEL (+47) 53 40 37 00.
Svalbard/Longyear	ENSB	MON - FRI: 0830 - 1645 (0730 - 1545), SAT - SUN: 0830 - 1415 (0730 - 1315)	
		RMK:	Excluding 24 and 25 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at <a href="mailto:acn@airportcoordination.com">acn@airportcoordination.com</a>
Svolvær/Helle	ENSH	MON - WED: 0330 - 2135 (0230 - 2035), THU - FRI: 0415 - 2135 (0315 - 2035), SAT: 0730 - 1250 (0630 - 1150), SUN: 1130 - 1330 (1030 - 1230) / 1530 - 2135 (1430 - 2035)	
		RMK:	NIL
		MON - FRI: No detailed OPS HR, AVBL O/R, SAT: NIL, SUN: O/R	

Sørkjosen	ENSR	RMK: NIL	
		MON - FRI: 0430 - 2300 (0330 - 2200), SAT - SUN: HO	
Tromsø/Langnes	ENTC	RMK: NIL	
		H24	
Trondheim/Værnes	ENVA	RMK: Avinor Security (+47) 67 03 28 00 / Securitas (+47) 941 65 959	
		MON - FRI: 0300-2400 (0200 - 2300), SAT: 1000 - 1530 (0900 - 1430), SUN: 0800 - 1030 (0700 - 0930) / 1500 - 2400 (1400 2300)	
Vadsø	ENVD	RMK: NIL	
		MON - FRI: 0730 - 1230 (0630 - 1130) / 1700 - 2130 (1600 - 2030), SAT: NIL, SUN: 1700 - 2130 (1600 - 2030)	
Vardø/Svartnes	ENSS	RMK: NIL	
		NIL	
Ørland	ENOL	RMK: NIL	
		No detailed OPS HR, AVBL O/R	
Ørsta-Volda/Hovden	ENOV	RMK: Avarn Security Aviation AS (+47) 475 00 028 / lin.sande@avarnsecurity.com	
		MON - SAT: 0500 - 2230 (0400 - 2130), SUN: 0400 - 2300 (0300 - 2200)	
Ålesund/Vigra	ENAL	RMK: NIL	

### AD 2.3 Operational hours: De-Icing

AIRPORT	ICAO	HR	
Alta	ENAT	AVBL O/R	
		RMK: Widerøe Ground Handling (+47) 417 06 931 / (+47) 417 06 962	
Andøya/Andenes	ENAN	No detailed OPS HR, AVBL O/R	
		RMK: NIL	

Arendal/Gullknapp	ENGK	NIL	
		RMK:	NIL
Bardufoss	ENDU	No detailed OPS HR, AVBL O/R	
		RMK:	CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / <a href="mailto:operations.bdu@aviator.eu">operations.bdu@aviator.eu</a> Limited to ACFT max height 17 M / MIL TFC Base/Wing Ops, (+47) 77 89 62 52 Limited to ACFT max height 17 M
Bergen/Flesland	ENBR	01 OCT - 30 APR AVBL H24 / 01 MAY - 30 SEP AVBL O/R de-ice operator	
		RMK:	Aviator De-icing 0515 - 2315 (0415 - 2215) (+47) 920 41 009 / Widerøe Ground Handling 0530 - 2300 (0430 - 2200) O/R 2300 - 0530 (2200 - 0430) (+47) 64 82 85 02
Berlevåg	ENBV	MON - FRI: 0600 - 2030 (0500 - 1930), SAT: NIL, SUN: 1100 - 1400 (1000 - 1300) / 1800 - 2030 (1700 - 1930)	
		RMK:	NIL
Bodø	ENBO	HO	
		RMK:	Widerøe Ground Handling (+47) 417 06 818, Aviator Airport Alliance ENBO (+47) 948 26 655
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R	
		RMK:	Widerøe Ground Handling(+47) 41 70 63 40
Båtsfjord	ENBS	MON - FRI: 0530 - 2030 (0430 - 1930), SAT: NIL, SUN: 1030 - 1330 (0930 - 1230) / 1730 - 2030 (1630 - 1930)	
		RMK:	AVBL O/R BTN OCT - JUN, Widerøe Ground Handling (+47) 948 85 740 / <a href="mailto:batsfjord@wideroe.no">batsfjord@wideroe.no</a>
Florø	ENFL	No detailed OPS HR, AVBL O/R	
		RMK:	Widerøe Ground Handling (+47) 41 70 69 30
Førde/Bringeland	ENBL	No detailed OPS HR, AVBL O/R	
		RMK:	NIL
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R	
		RMK:	NIL

Harstad/Narvik/Evenes	ENEV	No detailed OPS, AVBL O/R
		RMK: WGH (+47) 41 70 68 50 / <a href="mailto:handling.eve@wideroe.no">handling.eve@wideroe.no</a>
Hasvik	ENHK	Available for scheduled flights
		RMK: AVBL for HOSP/SAR O/R via Hasvik AFIS
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R
		RMK: NIL
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R
		RMK: NIL
Hønefoss/Eggemoen	ENEG	NIL/td>
		RMK: NIL
Kirkenes/Høybukthoen	ENKR	Within ATS OPS, AVBL O/R
		RMK: Widerøe Ground Handling <a href="mailto:handling.kkn@wideroe.no">handling.kkn@wideroe.no</a>
Kjeller	ENKJ	NIL
		RMK: NIL
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R
		RMK: Widerøe Ground Handling
Kristiansund/Kvernberget	ENKB	NIL
		RMK: No detailed OPR HR, AVBL O/R Widerøe Ground Handling TEL +47 417 06 255 / <a href="mailto:handling.ksu@wideroe.no">handling.ksu@wideroe.no</a>
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R
		RMK: Widerøe Ground Handling (+47) 989 01 364
Leknes	ENLK	No detailed OPS HR, AVBL O/R
		RMK: Widerøe Ground Handling (+47) 41 70 62 28

Mehamn	ENMH	NIL	
		RMK:	NIL
Mo I Rana/Røssvoll	ENRA	No detailed OPS HR, AVBL O/R	
		RMK:	Widerøe Ground Handling (+47) 989 01 355
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R	
		RMK:	Widerøe Ground Handling (+47) 417 06 671 / <a href="mailto:handling.mol@wideroe.no">handling.mol@wideroe.no</a>
Mosjøen/Kjærstad	ENMS	No detailed OPS HR, AVBL O/R	
		RMK:	Widerøe Gorund Handling
Namsos	ENNM	No detailed OPS HR, AVBL for SCHED TFC and AMB	
		RMK:	NIL
Notodden	ENNO	NIL	
		RMK:	NIL
Ny Ålesund/ Hamnerabben	ENAS	NIL	
		RMK:	NIL
Oslo/Gardermoen	ENGM	H24	
		RMK:	REF ENGM AD 2.20 para 11
Rena	ENRE	NIL	
		RMK:	NIL
Rygge	ENRY	No detailed OPR HR, AVBL O/R	
		RMK:	NIL
Røros	ENRO	No detailed OPR HR, AVBL O/R	

		RMK: AVBL O/R Røros Flyservice (+47) 72 41 39 00 rrs@rfly.no
Rørvik/Ryum	ENRM	No detailed OPS HR, AVBL O/R
		RMK: AVBL by prior arrangement
Røst	ENRS	No detailed OPS HR, AVBL O/R
		RMK: NIL
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R
		RMK: NIL
Sandefjord/Torp	ENTO	MON - SAT: 0500 - 2200 (0400 - 2100), SUN: 0600 - 2200 (0500 - 2100)
		RMK: REF ENTO AD 2.20
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R
		RMK: NIL
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R
		RMK: Widerøe Ground Handling (+47) 417 06 290
Stavanger/Sola	ENZV	H24
		RMK: SGS (+47) 957 19 657 / Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R
		RMK: (+47) 989 01 457
Stord/Sørstokken	ENSO	MON - FRI: 0600 - 1835 (0500 - 1735), SAT: CLOSED, SUN: 1145 - 1915 (1045 - 1815)
		RMK: De-icing TEL (+47) 53 40 37 12.
Svalbard/Longyear	ENSB	MON - FRI: 0830 - 1645 (0730 - 1545), SAT - SUN: 0830 - 1415 (0730 - 1315)
		RMK: Excluding 24 and 25 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at acn@airportcoordination.com

Svolvær/Helle	ENSH	MON - WED: 0330 - 2135 (0230 - 2035), THU - FRI: 0415 - 2135 (0315 - 2035), SAT: 0730 - 1250 (0630 - 1150), SUN: 1130 - 1330 (1030 - 1230) / 1530 - 2135 (1430 - 2035)
		RMK: NIL
Sørkjosen	ENSR	MON - FRI: No detailed OPS HR, AVBL O/R, SAT: NIL, SUN: O/R/td>
		RMK: NIL
Tromsø/Langnes	ENTC	WGH OPS HR AVBL O/R. Aviator OPS HR SUN - THU: 0430 - 2100 (0330 - 2000), FRI: 0430 - 2000 (0330 - 1900), SAT: 0500 - 1930 (0400 - 1830)
		RMK: WGH (+47) 417 06 870, Aviator (+47) 458 67 982 (day), (+47) 413 06 810 (night)
Trondheim/Værnes	ENVA	AVBL for scheduled flights. Otherwise O/R.
		RMK: WGH De-icing (+47) 417 06 713 (day) / (+47) 417 06 719 (night) / Aviator De-icing (+47) 910 02 980
Vadsø	ENVD	MON - FRI: 0300 - 1330 (0200 - 1230) / 1500 - 2400 (1400 - 2300), SAT: 1030 - 1530 (0930 - 1430), SUN: 0800 - 1030 (0700 - 0930) / 1500 - 2400 (1400 - 2300)
		RMK: NIL
Vardø/Svartnes	ENSS	MON - FRI: 0730 - 1230 (0630 - 1130) / 1700 - 2130 (1600 - 2030), SAT: NIL, SUN: 1700 - 2130 (1600 - 2030)
		RMK: NIL
Ørland	ENOL	NIL
		RMK: NIL
Ørsta-Volda/Hovden	ENOV	No detailed OPS HR, AVBL O/R
		RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no
Ålesund/Vigra	ENAL	No detailed OPS HR, AVBL O/R
		RMK: Widerøe Ground Handling (+47) 417 06 204, Aviator (+47) 922 00 472

AD 2.6 Operational hours: Rescue and fire fighting service

AIRPORT	ICAO	HR
---------	------	----

Alta	ENAT	CAT 4	Outside published HR CAT 7
		CAT 5	FRI: 2000 - 2200 (1900 - 2100)
		CAT 7	MON - THU: 0530 - 2200 (0430 - 2100), FRI: 0530 - 1430 (0430 - 1330), SAT: 1715 - 1830 (1615 - 1730), SUN: 0600 - 2200 (0500 - 2100)
Andøya/Andenes	ENAN	CAT 4	MON - SUN: Outside airport HR of OPS
		CAT 5	MON - FRI: 0430 - 2100 (0330 - 2000), SAT: 0700 - 1100 (0600 - 1000), SUN: 0900 - 2100 (0800 - 2000)
		CAT 6	O/R ATC MNM 48 HR prior to ETA
		CAT 7	
		CAT 8	
Arendal/Gullknapp	ENGK	NIL	NIL
Bardufoss	ENDU	CAT 7 / MIL NATO CAT 6	H24
		CAT 8 / MIL NATO CAT 7	O/R ATC MNM 24 HR prior to ETA
		CAT 9 / MIL NATO CAT 8	O/R ATC MNM 24 HR prior to ETA
Bergen/Flesland	ENBR	CAT 7	H24
		CAT 9	O/R ATC MNM 30 MIN prior to ETA
Berlevåg	ENBV	CAT 4	MON - FRI: 0600 - 2030 (0500 - 1930), SAT: NIL, SUN: 1100 - 1400 (1000 - 1300) / 1800 - 2030 (1700 - 1930)
Bodø	ENBO	CAT 7	H24
		CAT 9	AVBL O/R 24 HR prior ETA
Brønnøysund/Brønnøy	ENBN	CAT 5	MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0915 - 1515 (0815 - 1415), SUN: 1200 - 2200 (1100 - 2100)
		RMK	NIL
Båtsfjord	ENBS	CAT 4	MON - FRI: 0600 - 2015 (0500 - 1915), SAT: NIL, SUN: 1115 - 2015 (1015 - 1915)

Florø	ENFL	CAT 4	MON - FRI: 0410 - 2130 (0310 - 2030), SAT: 1200 - 1215 (1100 - 1115) / 1530 - 1700 (1430 - 1600), SUN: 1200 - 1215 (1100 - 1115) / 1630 - 2130 (1530 - 2030)
		RMK	Airport operates on RFFS category 4. Aircrafts with higher RFFS category is operated with one RFFS category below the aeroplane category, due to number of movements are less than 700 in the busiest consecutive three months. Ref. ICAO Annex 6.
Førde/Bringeland	ENBL	CAT 4	MON - FRI: 0450 - 0845 (0350 - 0745) / 1150 - 1250 (1050 - 1150) / 1450 - 1550 (1350 - 1450) / 1850 - 1950 (1750 - 1850) / 2150 - 2230 (2050 - 2130), SAT: 0550 - 0630 (0450 - 0530) / 1150 - 1530 (1050 - 1430), SUN: 0750 - 0830 (0650 - 0730) / 1150 - 1250 (1050 - 1150) / 1450 - 1550 (1350 - 1450) / 1850 - 1950 (1750 - 1850) / 2150 - 2230 (2050 - 2130)
		RMK	For SKED TFC only. Other TFC O/R
Hammerfest	ENHF	CAT 4	MON - FRI: 0505 - 2310 (0405 - 2210), SAT: 1150 - 1400 (1050 - 1300), SUN: 0935 - 2310 (0835 - 2210)
		RMK:	AVBL on 40 MIN REQ via Polaris ACC
Harstad/Narvik/Evenes	ENEV	CAT 7	H24
		CAT 9	O/R to operator/handling agent MNM 12 HR prior to ETA
Hasvik	ENHK	CAT 4	MON - FRI: 0630 - 2000 (0530 - 1900), SAT: NIL, SUN: 1330 - 1530 (1230 - 1430) / 1830 - 2000 (1730 - 1900)
Haugesund/Karmøy	ENHD	CAT 4	Outside published CAT 7 HR of OPR
		CAT 7	MON - FRI: 0520 - 2100 (0420 - 2000), SAT: 0600 - 2100 (0500 - 2000), SUN: 0700 - 2230 (0600 - 2130)
Honningsvåg/Valan	ENHV	CAT 4	MON - FRI: 0435 - 2205 (0335 - 2105), SAT: CLSD, SUN: 1130 - 1330 (1030 - 1230) / 2030 - 2205 (1930 - 2105)
Hønefoss/Eggemoen	ENEG	CAT 4	O/R
Kirkenes/Høybukta	ENKR	CAT 4	Outside published CAT 7 HR of OPR
		CAT 7	MON - FRI: 0600 - 2200 (0500 - 2100), SAT: 0800 - 1500 (0700 - 1400), SUN: 0800 - 2200 (0700 - 2100)
Kjeller	ENKJ	CAT 6	O/R for MIL operations
		CAT 4	Outside published CAT 7 HR of OPR
			MON - SAT: 0500 - 2205 (0400 - 2105), SUN: 0500 - 2245 (0400 - 2145) / Outside published CAT 7 HR of

Kristiansand/Kjevik	ENCN	CAT 7	OPR, O/R ATC MNM 1 HR prior to ETA
		CAT 8	O/R ATC MNM 1 HR prior to ETA
Kristiansund/Kvernberget	ENKB	CAT 7	MON - FRI: 0515 - 2200 (0415 - 2100), SAT: 0900 - 1600 (0800 - 1500), SUN: 1100 - 2200 (1000 - 2100)
Lakselv/Banak	ENNA	CAT 4	MON - SUN: Outside airport HR of OPS
		CAT 5	MON: 0500 - 0800 (0400 - 0700) / 1200 - 2315 (1100 - 2215), TUE - THU: 0500 - 2315 (0400 - 2215), FRI: 0500 - 0800 (0400 - 0700) / 1200 - 2315 (1100 - 2215), SAT: 0830 - 1300 (0730 - 1200), SUN: 1200 - 2315 (1100 - 2215)
		CAT 7	MON: 0800 - 1200 (0700 - 1100), FRI: 0800 - 1200 (0700 - 1100), and O/R ATC MNM 2 HR prior to ETA during airport HR of OPS
		CAT 8	O/R ATC MNM 48 HR prior to ETA
		CAT 9	
Leknes	ENLK	CAT 4	MON - FRI: 0535 - 2255 (0435 - 2155), SAT: 0750 - 1610 (0650 - 1510), SUN: 1000 - 1750 (0900 - 1650) / 1920 - 2255 (1820 - 2155)
Mehamn	ENMH	CAT 4	MON - FRI: 0405 - 1220 (0305 - 1120) / 1610 - 2320 (1510 - 2220), SAT: NIL, SUN: 1705 - 2320 (1605 - 2220)
Mo I Rana/Røssvoll	ENRA	CAT 4	MON - FRI: 0500 - 2210 (0400 - 2110), SAT: 0800 - 1500 (0700 - 1400), SUN: 1225 - 2210 (1125 - 2110)
Molde/Årø	ENML	CAT 7	MON - FRI: 0505 - 2100 (0405 - 2000), SAT: 0600 - 1500 (0500 - 1400), SUN: 0930 - 2250 (0830 - 2150)
		RMK:	HOSP/SAR outside HR of OPS AVBL O/R 40 MIN prior notice via Polaris ACC
Mosjøen/Kjærstad	ENMS	CAT 4	MON - FRI: 0350 - 2050 (0250 - 1950), SAT: 0350 - 1450 (0250 - 1350), SUN: 1020 - 2050 (0920 - 1950)
Namsos	ENNM	CAT 4	MON - FRI: 0500 - 2155 (0400 - 2055), SAT: CLOSED, SUN: 0830 - 1600 (0730 - 1500) / 2030 - 2200 (1930 - 2100)
		RMK:	NIL
Notodden	ENNO	CAT 3	O/R
Ny Ålesund/ Hamnerabben	ENAS	CAT 3	Within AFIS HR of SER
Oslo/Gardermoen	ENGM	CAT 9	H24

Rena	ENRE	NIL	NIL
Rygge	ENRY	CAT 4 / MIL NATO CAT 3	H24
		CAT 7 / MIL NATO CAT 6	MON - FRI: 0700 - 1900 (0600 - 1800)
Røros	ENRO	CAT 4	MON - FRI: 0530 - 1515 (0430 - 1415) / 1740 - 1810 (1640 - 1710), SAT: CLOSED, SUN: 1100 - 1820 (1000 - 1720)
		CAT 5	AVBL O/R ATS MNM 48 HR prior to ETA
		CAT 6	
Rørvik/Ryum	ENRM	CAT 4	MON - FRI: 0505 - 1325 (0405 - 1225) / 1340 - 2120 (1240 - 2020), SAT: 0940 - 1015 (0840 - 0915), SUN: 1205 - 2120 (1105 - 2020)
Røst	ENRS	CAT 4	MON: 0650 - 0830 (0550 - 0730) / 1830 - 2055 (1730 - 1955), TUE - THU: 0650 - 2055 (0550 - 1955), FRI: 0650 - 0830 (0550 - 0730) / 1830 - 2055 (1730 - 1955), SAT: 0650 - 1000 (0550 - 0900), SUN: 1730 - 2055 (1630 - 1955)
Sandane/Anda	ENSD	CAT 4	MON - FRI: 0440 - 2155 (0340 - 2055), SAT: 0640 - 1630 (0540 - 1530), SUN: 1030 - 1145 (0930 - 1045) / 1615 - 2155 (1515 - 2055)
Sandefjord/Torp	ENTO	CAT 7	MON - SAT: 0500 - 2200 (0400 - 2100), SUN: 0600 - 2200 (0500 - 2100)
Sandnessjøen/Stokka	ENST	CAT 4	MON - FRI: 0500 - 2215 (0400 - 2115), SAT: 0930 - 1300 (0830 - 1200), SUN: 1345 - 2215 (1245 - 2115)
Sogndal/Haukåsen	ENSG	CAT 4	MON - FRI: 0510 - 0845 (0410 - 0745) / 1350 - 1430 (1250 - 1330), 1650 - 2130 (1550 - 2030), SAT: 0750 - 1030 (0650 - 0930) / 1450 - 1530 (1350 - 1430), SUN: 1350 - 1430 (1250 - 1330) / 1650 - 2130 (1550 - 2030)
		RMK	For SKED TFC only. Other TFC O/R
Stavanger/Sola	ENZV	CAT 7	H24
		CAT 9	O/R ATC MNM 30 MIN prior to ETA
Stokmarknes/Skagen	ENSK	CAT 4	MON - WED: 0515 - 2015 (0415 - 1915), THU - FRI: 0450 - 2015 (0350 - 1915), SAT: 1000 - 1500 (0900 - 1400), SUN: 1000 - 2015 (0900 - 1915)
		CAT 4	MON - FRI: 0500 - 1835 (0400 - 1735), SAT: CLOSED, SUN: 1045 - 1915 (0945 - 1815) / Outside HR of OPS

Stord/Sørstokken	ENSO		TEL (+47) 913 44 862.
		CAT 5	AVBL O/R ATS MNM 48 HR prior to ETA.
		CAT 6	
Svalbard/Longyear	ENSB	CAT 4, 7	MON - FRI: 0830 - 1645 (0730 - 1545), SAT, SUN: 1030 - 1415 (0930 - 1315)
		RMK	Excluding 24, 25 and 26 DEC. Extended opening hours can be requested and will cause an additional cost. For requesting arrival- and departure time, contact Nordic Airport Coordination at <a href="mailto:acn@airportcoordination.com">acn@airportcoordination.com</a>
Svolvær/Helle	ENSH	CAT 4	MON - TUE: 0400 - 2250 (0300 - 2150), WED - FRI: 0535 - 2250 (0435 - 2150), SAT: 0930 - 1250 (0830 - 1150), SUN: 1145 - 2250 (1045 - 2150)
Sørkjosen	ENSR	CAT 4	MON - FRI: 0445 - 1945 (0345 - 1845), SAT: NIL, SUN: 1130 - 1330 (1030 - 1230) / 1530 - 2135 (1430 - 2035)
Tromsø/Langnes	ENTC	CAT 4	MON - SUN: 2300 - 0500 (2200 - 0400)
		CAT 7	MON - SUN: 0500 - 2300 (0400 - 2200)
Trondheim/Værnes	ENVA	CAT 7	H24
		CAT 9	O/R ATC MNM 30 MIN prior to ETA
Vadsø	ENVD	CAT 4	MON - FRI: 0330 - 2325 (0230 - 2225), SAT: 0945 - 1730 (0845 - 1630), SUN: 1230 - 1415 (1130 - 1315) / 1630 - 2325 (1530 - 2225)
Vardø/Svartnes	ENSS	CAT 4	MON - FRI: 0700 - 1845 (0600 - 1745), SAT: NIL, SUN: 1045 - 1300 (0945 - 1200) / 1700 - 1845 (1600 - 1745)
Ørland	ENOL	CAT 6	H24
		CAT 9	AVBL O/R. Please inform if required, when applying for PPR, REF AD 2.20
Ørsta-Volda/Hovden	ENOV	CAT 4	MON - FRI: 0445 - 2230 (0345 - 2130), SAT: 0645 - 1700 (0545 - 1600), SUN: 0915 - 1715 (0815 - 1615) / 1845 - 2230 (1745 - 2130)
		RMK	HOSP/SAR OUTSIDE HR OF OPS AVBL O/R VIA Polaris ACC Bodø
Ålesund/Vigra	ENAL	CAT 4	AVBL O/R outside CAT 7 HRS of OPR
		CAT 7	MON - SUN: 0500 - 2230 (0400 - 2130)
		CAT 8	AVBL O/R 24 HR prior ETA

## AD 3.3/6 Operational hours

AIRPORT	ICAO	HR	
Haakonvern	ENBH	AD administration	MON - FRI: 0630 - 1430 (0530 - 1330), SAT - SUN: NIL
		Customs and immigration	NIL
		MET	NIL
		ATS	NIL
		FUEL	No detailed OPR HR, AVBL O/R (+47) 917 72 777
		Handling	NIL
		Security	NIL
		De-Icing	NIL
		Rescue and Fire fighting	CAT 3: MON - FRI: 0630 - 1430 (0530 - 1330), SAT - SUN: NIL. RMK: Outside OPR HR AVBL O/R (+47) 917 72 777
Værøy	ENVR	AD administration	MON - FRI: 0630 - 1100 (0530 - 1000) / 1330 - 1700 (1230 - 1600), SAT: 0630 - 1100 (0530 - 1000), SUN: 1330 - 1700 (1230 - 1600)
		Customs and immigration	NIL
		MET	O/R MWO Tromsø TEL (+47) 77 62 13 00
		ATS	FIS AVBL H24 via Bodø ATCC
		FUEL	NIL
		Handling	No detailed OPS HR, AVBL O/R. RMK: AD ADMIN
		Security	O/R ADMIN
		De-Icing	NIL
		Rescue and Fire fighting	CAT H2: MON - FRI: 0645 - 1045 (0545 - 0945) / 1345 - 1645 (1245 - 1545), SAT: 0645 - 1045 (0545 - 0945), SUN: 1345 - 1645 (1245 - 1545)

